



TRIFORCE[®]
BUILT BY *Barrette*

ANALYZER

User Guide

(Version 3.2 – June 2021)



Contents :

System Requirements.....	2
1. Installation	3
2. Start Analyzer	4
3. File.....	4
4. Preference.....	5
4.1 Hanger.....	5
4.2 Continuous Strongback.....	6
4.3 Reinforcement Preference Order.....	7
4.4 Squash Block/Stiffener Preference Order.....	8
4.5 Allow Open Joist Whole Panel Trim.....	8
4.6 Use OpenJoist2000 Manufactured Without Camber	9
5. Use	9
6. Building Code	9
7. Units	9
8. Inventory – Inventory Treshold.....	10
9. Language.....	10
10. Analyze.....	10
11. Help	11
11.1 Signal Error	11
11.2 Install New Authentication Certificate	11
12. Database	12
13. Inputs.....	13
13.1 Job Description	13
13.1 Job Number.....	13
13.1 Joist ID	13
13.1 Joist Overall Length	13
13.2 Service Condition	13
13.3 Building Importance Category (for Canada only).....	14
13.4 Perpendicular Perimeter Materials.....	14
13.5 Bearings	15
13.6 Treatment.....	16
13.7 Deflection Limits.....	17
13.8 Joist/Beam Spacing	17
13.9 Joist Type.....	18
13.10 Joist Depth	18

User Guide – Version 3.2

13.11	Joist Plies	18
13.12	Joist Grade	18
13.13	Trim	18
14.	Viewer	19
15.	Loading.....	20
15.1	Label.....	20
15.2	Flood Zone (for USA only)	20
15.3	Type	20
15.3	Type - Static	20
15.3	Type - Moving Load	21
15.3	Type - Self-Weight	21
15.4	Applied to	21
16.	Distribution.....	22
16.1	Area Load.....	22
16.2	Uniform Load.....	22
16.3	Line Load	23
16.4	Concentrated Load.....	23
17.	Loads list and viewer	24
18.	Floor/Roof Composition.....	25
18.1	Sheeting	25
18.2	Ceiling	26
18.3	Gypsum Board	27
18.4	Vibration (For Canadian Code).....	27
19.	Web Holes	30
19.1	Web Hole Circular	31
19.2	Web Hole Rectangular	31
20.	Job Info.....	32
21.	Summary Report	33
22.	Full Report.....	34
23.	Reactions.....	34
24.	Show Graphics.....	35
25.	Appendix A	36


System Requirements

- Windows 8.1 or newer version
- Processor: 1 GHz or faster 32-bit or 64-bit
- 16 GB available hard disk space (32-bit) or 20 GB (64-bit)
- DirectX 9 graphics device with WDDM 1.0 or higher driver
- Screen Resolution 1280 x 1020 or more
- High Speed Internet Connection


User Guide – Version 3.2

1. Installation

After requesting the software, our team will get back to you promptly. You will receive a similar email inviting you to download and install the program:

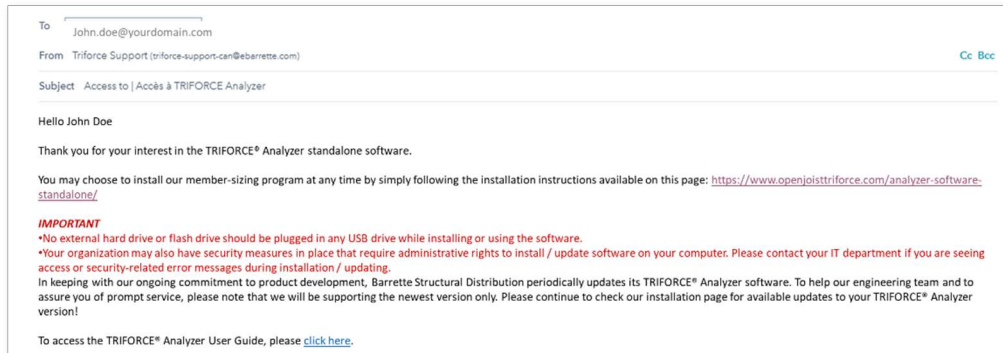

Use the specified hyperlink to access the download page and follow the instructions for the installation.

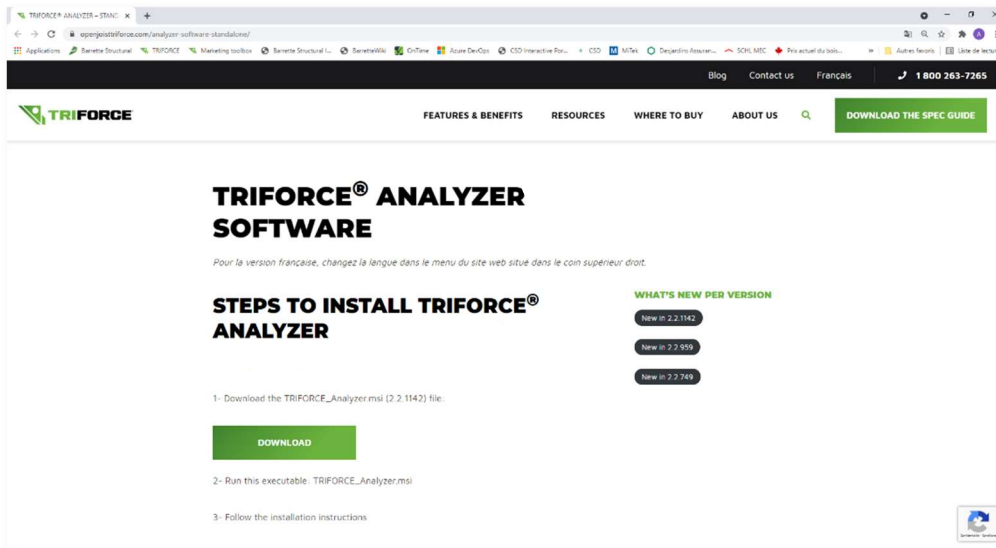

If you have installation issues, please do not hesitate to contact us. We will be glad to assist you.

Email: CAN : triforce-support-can@ebarrette.com

USA : triforce-support-usa@ebarrette.com

Toll Free: 1-800-263-7265

Note that our offices are open Monday to Friday, from 8 a.m. to 5 p.m. (EDT)

2. Start Analyzer

During the Installation of Analyzer, a “TRIFORCE® Analyzer” icon will be installed.

Launch the application by clicking the **TRIFORCE® Analyzer** icon.

When first launching the Analyzer software, you will need to configure your defaults in the “Preference” section. Please refer to Section 4 for more information.

3. File

In the **File** Tab, you will be able to:

New: Creates a new joist design


Open: Open an existing design

Save: Allows you to save a joist design

Save As: Allows you to save the design under a different name.

Save Defaults: Save the last design configurations as defaults setting.

Exit: To Exit Analyzer.

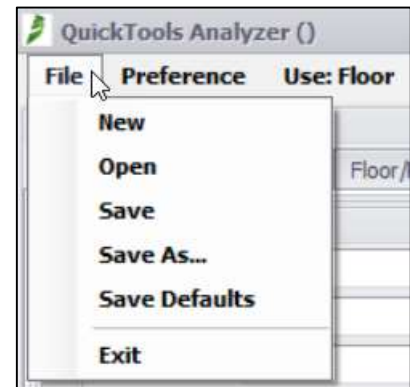


4. Preference

In the **Preference** Tab, you will be able to select and give priority to different materials in order to analyse your joist as per your personalized settings.


For Hanger, Continuous Strongback, Reinforcement and Squash Block/Stiffener, you can click on the empty box in order to add any other material that will then be available in the Database (see page 12).

You can select any row and move it up and down using the arrows appearing at the bottom of the dialog box. Don't forget to click on "save" before closing any dialog box!

4.1 Hanger Preference Order:

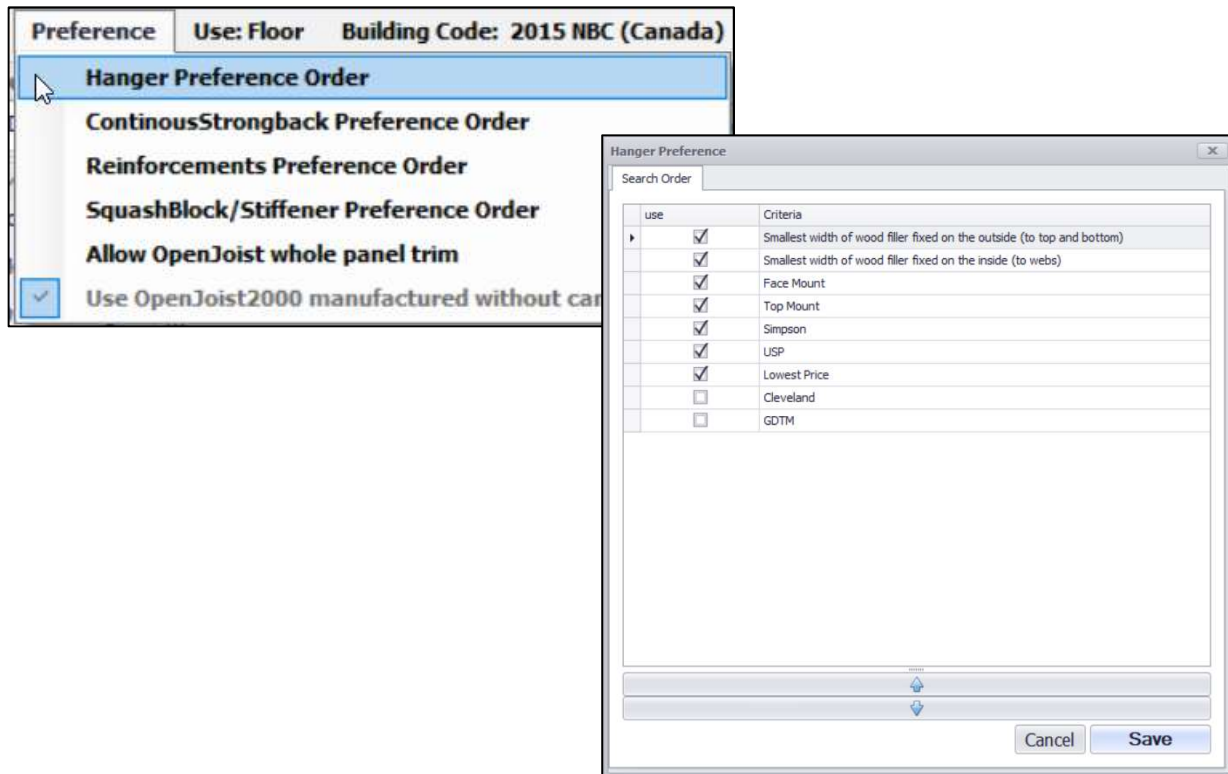


4.2 Continuous Strongback Preference Order:

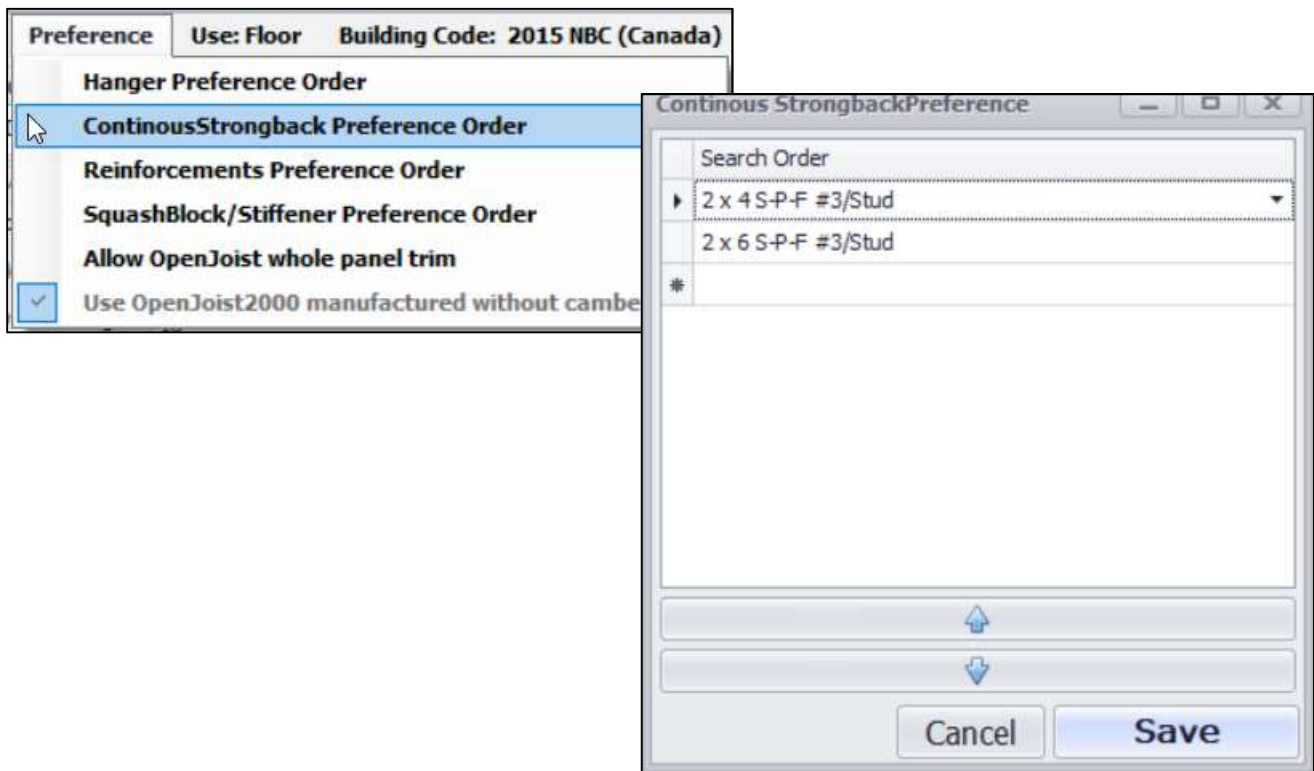


You can select the size and grade for strongbacks and set the preference search order. Those strongbacks are used for the Canadian Vibration Criteria analysis and are not required in the US.

Even if they are made mandatory by the Canadian Building Codes and remain optional in the US, strongbacks can be added when working under the ICC code mode by simply checking “**Perform Canadian vibration check**” under Floor / Roof Composition:

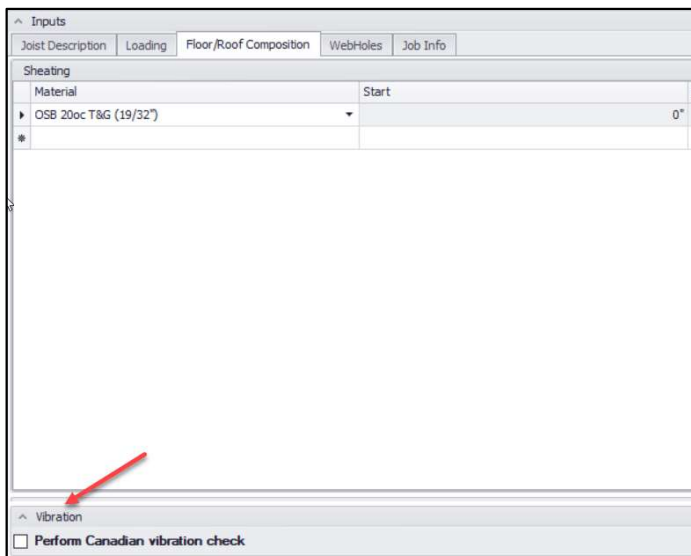

4.3 Reinforcements Preference Order:

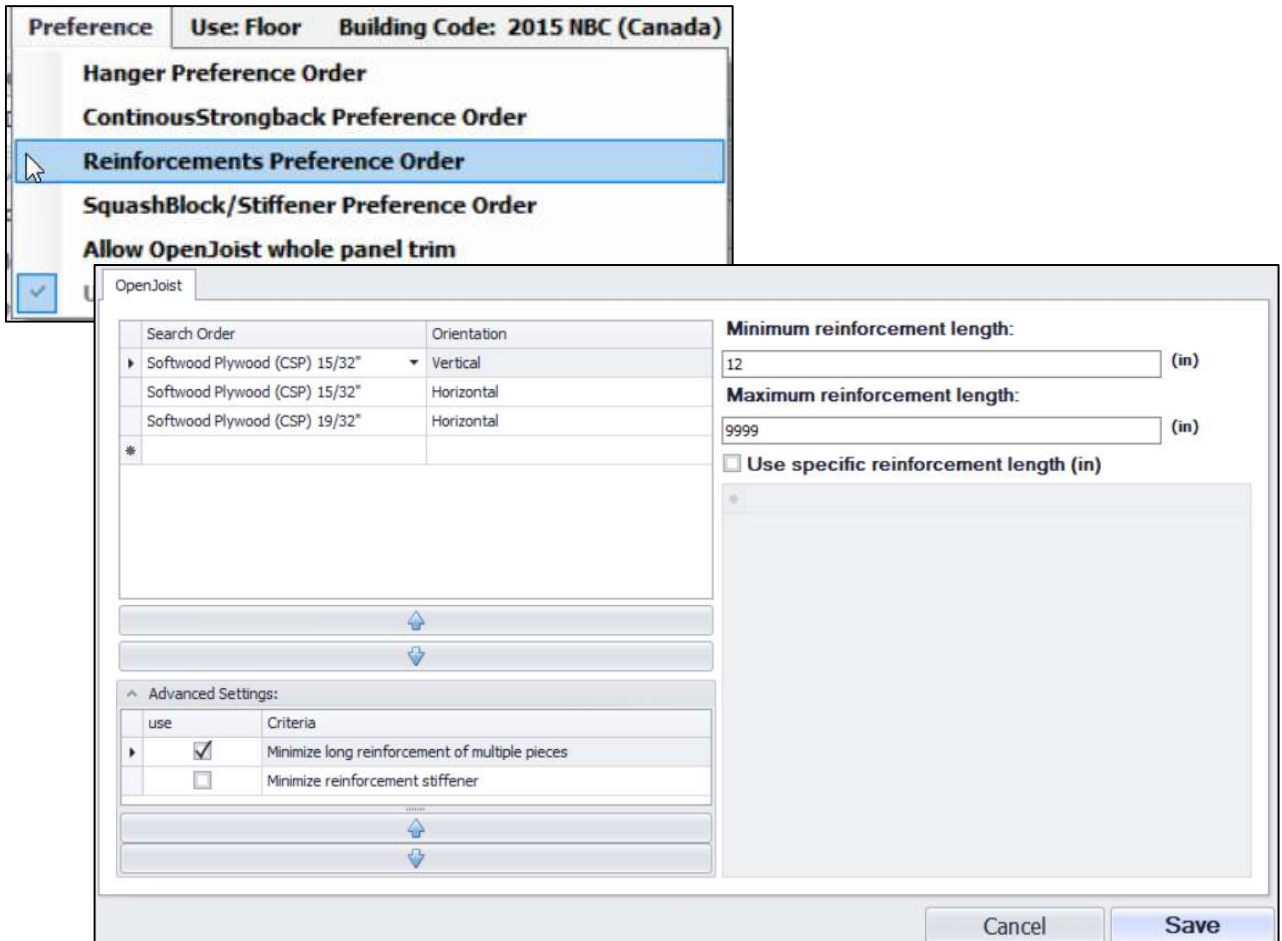


You can select different materials such as OSB/Plywood, thickness and even select its orientation: vertical or horizontal.

Hint: Vertical material is stronger than horizontal material but would need a joint cover if the request length is more than 48”.

These reinforcements will be used for reinforced girders, cantilevered joists, etc.


4.4 SquashBlocks/Stiffeners Preference Order:

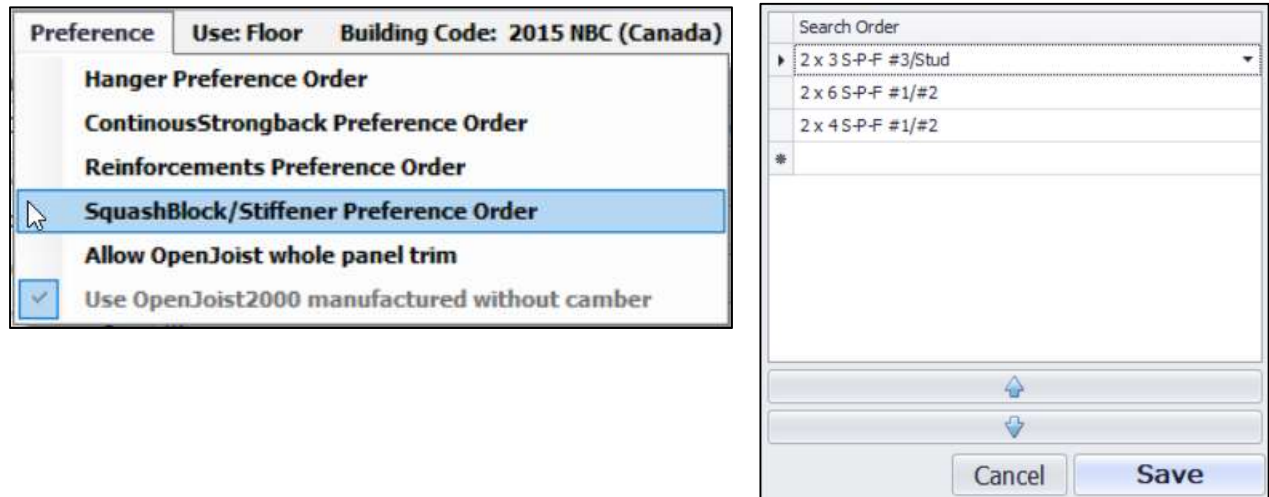

Those squash blocks or web stiffeners are used for reinforcement under a concentrated load on top or at bearings. Once again, you can select different sizes and grades.

4.5 Allow OpenJoist whole panel trim:

The TRIFORCE® open joists are manufactured every 2 feet. Every now and then, we have customers having the joist cut more than 24". By selecting "Allow OpenJoist whole panel trim", you have access to analyze the joist when cut more than the recommended 24".

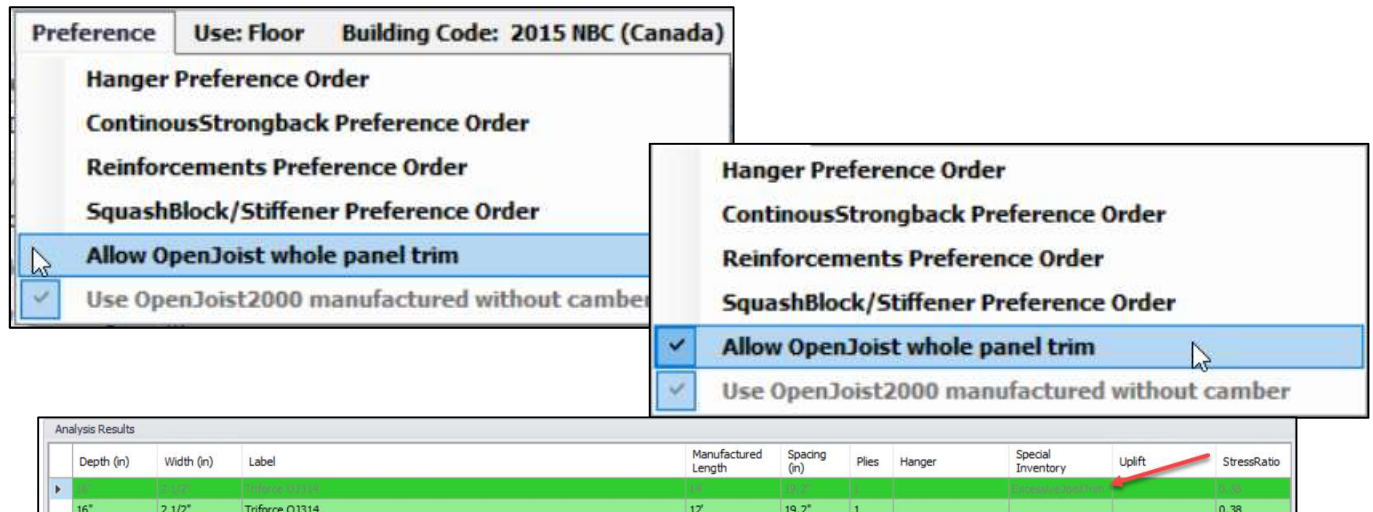

4.6 Use OpenJoist2000™ manufactured without camber:


This feature is for licensees manufacturing Open Joist 2000™ products only.

User Guide – Version 3.2

5. Use

When designing a joist, you need to select the usage of that joist:

- Floor
- Floor Limited Accessibility
- Roof
- Roof Terrace/Balcony

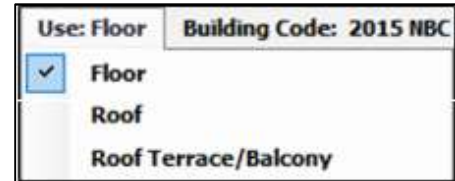

Use: Floor Building Code: 2015 NBC

<input checked="" type="checkbox"/>	Floor
<input type="checkbox"/>	Roof
<input type="checkbox"/>	Roof Terrace/Balcony

Depending on the usage selected, the values used for the analysis could be different due to local building code used.

6. Building Code

Up-to-date Canadian and US codes are available:

Hint: When changing your code selection, your data aren't retained.




<input type="checkbox"/>	2005 NBC (Canada)
<input type="checkbox"/>	2010 NBC (Canada)
<input type="checkbox"/>	2015 NBC (Canada)
<input type="checkbox"/>	2012 OBC 2010 NBC (Ontario, Canada)
<input type="checkbox"/>	2012 OBC 2015 NBC (Ontario, Canada)
<input type="checkbox"/>	ICC 2012-IBC/IRC (USA)
<input type="checkbox"/>	ICC 2015-IBC/IRC (USA)
<input checked="" type="checkbox"/>	ICC 2018-IBC/IRC (USA)

7. Units

Imperial or Metric units are available for your designs:

Hint: When changing your unit selection, your data will be retained.

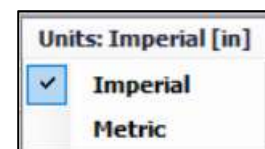

Units: Imperial [in]	
<input checked="" type="checkbox"/>	Imperial
<input type="checkbox"/>	Metric

8. Inventory & Inventory Threshold

8.1 Inventory:

The default inventory is set to “All Available” TRIFORCE® open joists SKU Manufactured by Barrette Structural Distribution.



8.2 Inventory Threshold:

You can sort your inventories by using those 4 different categories in the Database (see page 12):


- Not Available
- Authorization Required
- Occasional
- Available



9. Language


French and English are available:

Hint: When changing language, your data aren't retained and the software will exit and restart.

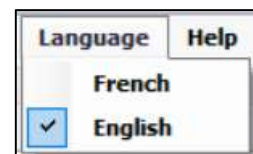

10. Analyze

If you select “Analyze” or press down on F5 on your keyboard, all data input will be analyzed.

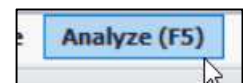


11. Help



11.1 Signal Error:

If an error occurs or you find one, please send us an email to the following address:
analyzer-support@ebarrette.com

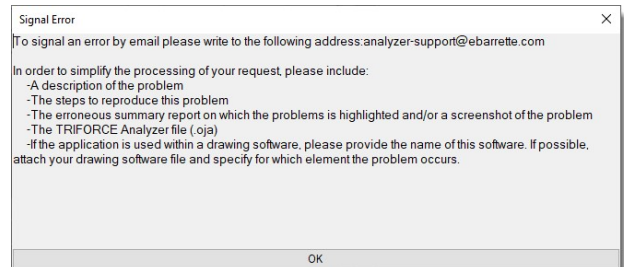


11.2 Install New Web Authentication Certificate:

This new version now allows the automatic Web Authentication certificate renewal. The program will automatically and regularly check with our license server. To achieve this, your computer needs to be connected to the Internet.

In rare occasion, or if your computer was disconnected from the Internet for a long period of time, you may have to manually prompt the automatic renewal of your Authentication Certificate by clicking on “install New Authentication Certificates” in the Help Menu.




You will be prompted to enter the email submitted when requesting access to the software.

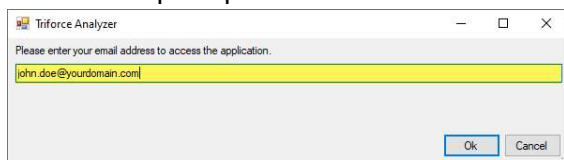


User Guide – Version 3.2

12. Database:

In the Database, you will be able to setup the Inventory Threshold category selected (see page 10):

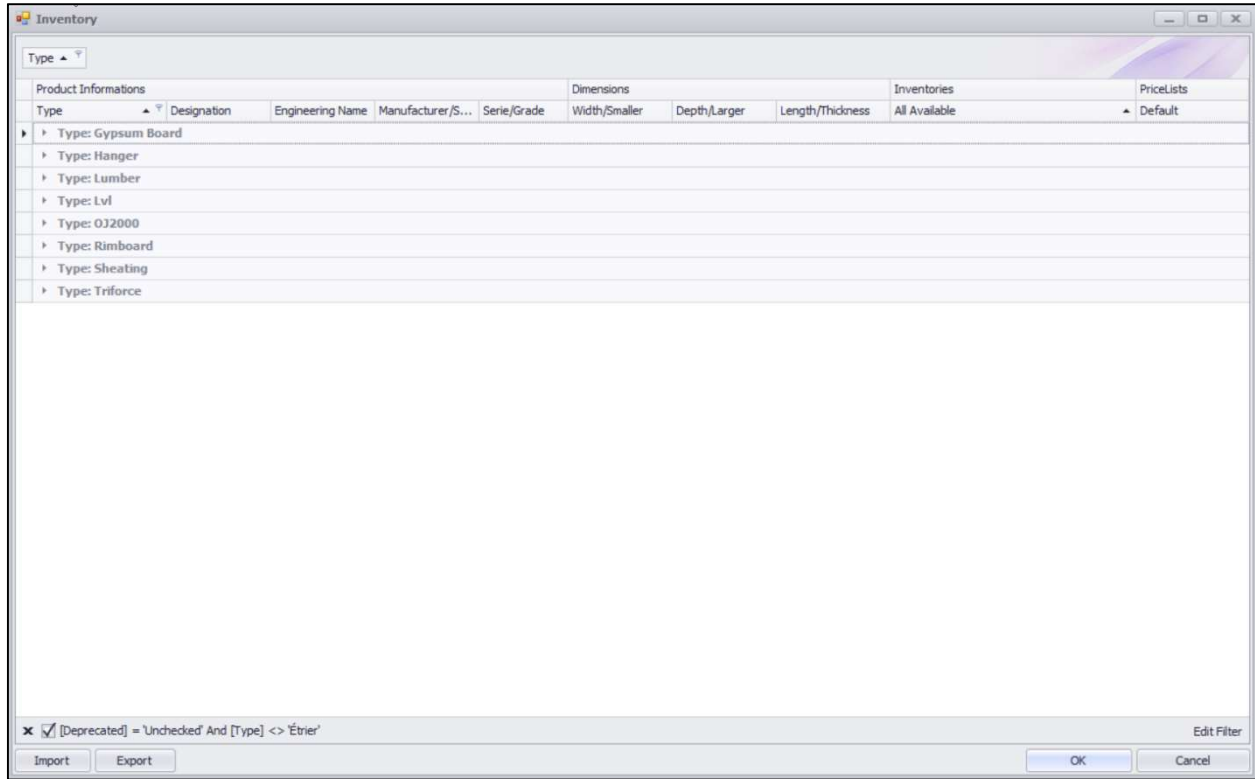

In each type of material, you will be able to change the product inventories default and price.

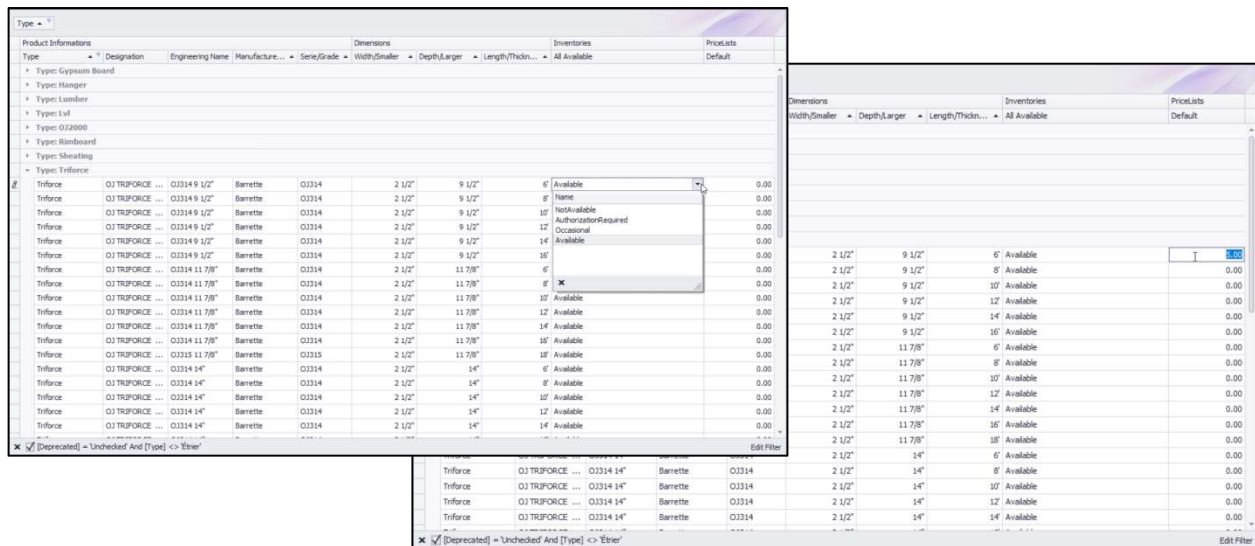


It allows you to sort material per price or per product availability.

User Guide – Version 3.2

13. Inputs:

13.1 Job Description:

- 1- **Job Number:** project reference name
- 2- **Member ID:** joist/girder identification
- 3- **Overall Length:** total length of the joist including the perimeter/rim board material
Use FFISS (feet, inch, sixteenth inch) format.
For example; 13' 5-3/16" would be entered as 130503

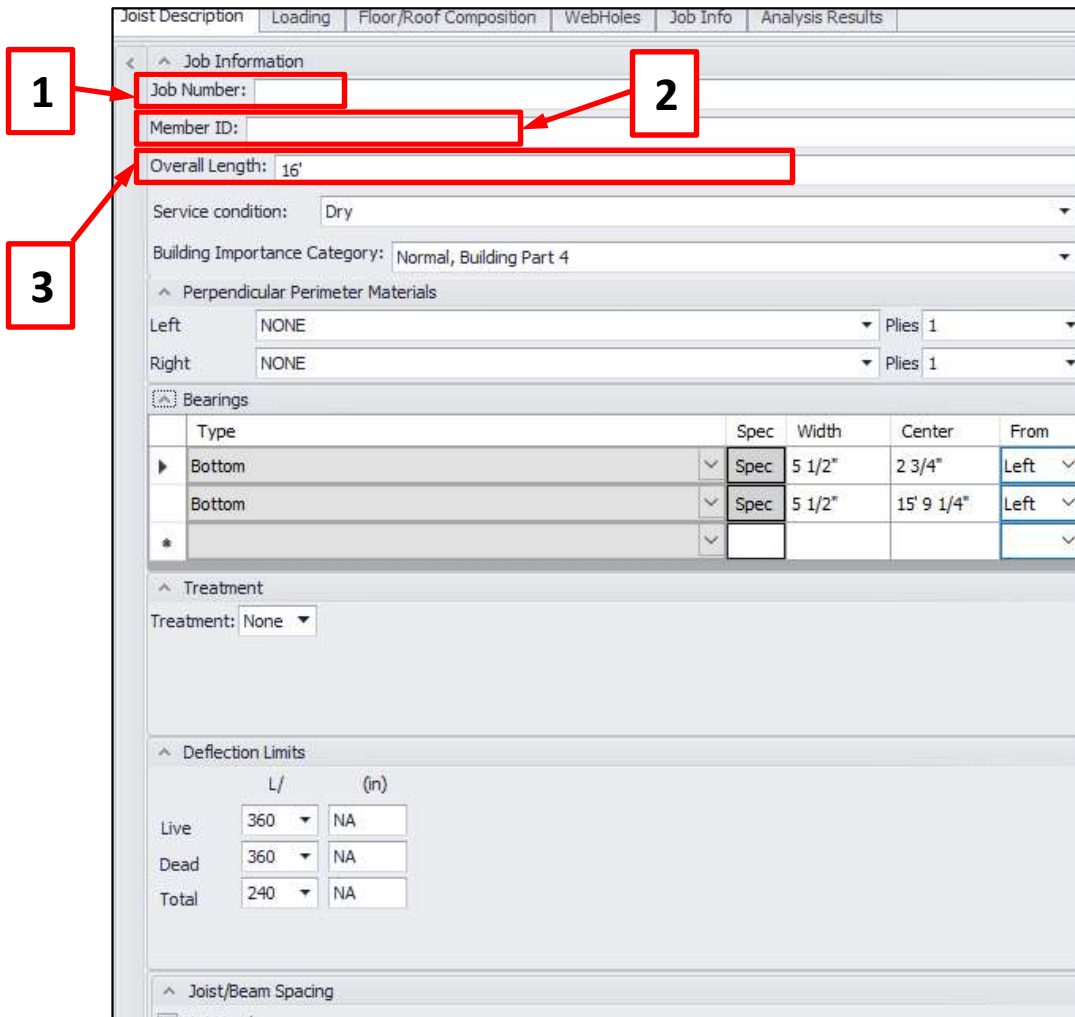

The screenshot shows the 'Job Information' section of the software interface. Three red boxes with arrows point to the input fields for 'Job Number', 'Member ID', and 'Overall Length'. The 'Overall Length' field contains the value '16'.

Service condition: Dry

Building Importance Category: Normal, Building Part 4

Perpendicular Perimeter Materials

Left: NONE Plies: 1

Right: NONE Plies: 1

Bearings

Type	Spec	Width	Center	From
Bottom	Spec	5 1/2"	2 3/4"	Left
Bottom	Spec	5 1/2"	15' 9 1/4"	Left
*				

Treatment: None

Deflection Limits

	L/	(in)
Live	360	NA
Dead	360	NA
Total	240	NA

Joist/Beam Spacing

13.2 Service Condition:

Normal condition is DRY

Could be WET only for Lumber or Glulam material (not available yet) as per application and local code.

User Guide – Version 3.2

13.3 Building Importance Category:


For NBC in Canada only (application as per code) not available for ICC code (USA):



The screenshot shows a software window with tabs: Joist Description, Loading, Floor/Roof Composition, WebHoles, and Job Info. The Job Info tab is active, showing a tree view with 'Job Information' expanded. Below it are input fields for Job Number, Member ID, Overall Length (set to 14'), and Service condition (set to Dry). A 'Perpendicular Perimeter Materials' section is partially visible at the bottom.

13.4 Perpendicular Perimeter Materials:

You can select NONE, 1 1/8" OSB or 1 3/4" LVL

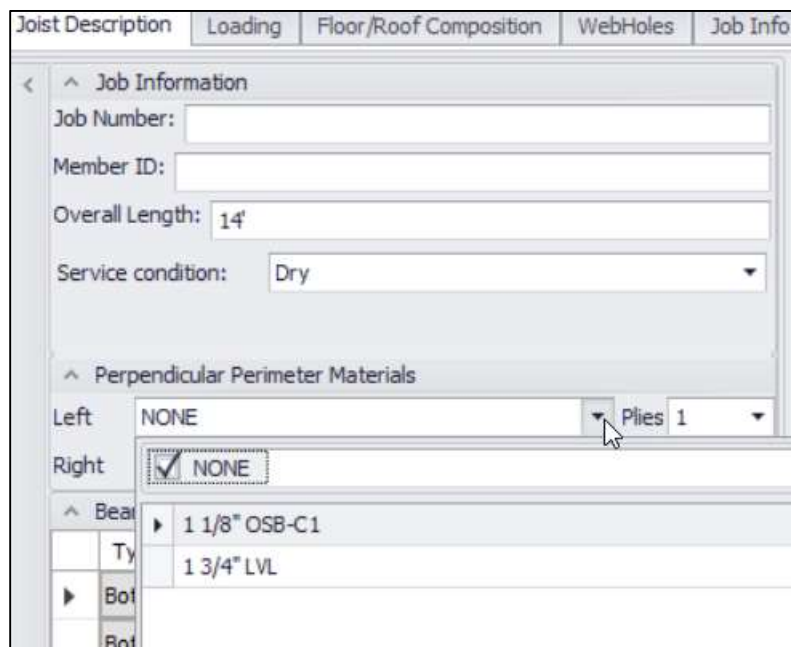

This screenshot shows the same software window as above, but with the 'Perpendicular Perimeter Materials' section expanded. It features 'Left' and 'Right' dropdown menus, both currently set to 'NONE'. A 'Plies' dropdown menu is set to '1'. Below these are expandable sections for 'Bear' (1 1/8" OSB-C1) and 'Bot' (1 3/4" LVL).


You can select 2 plies for the OSB only.

User Guide – Version 3.2

13.5 Bearings:

You must specify the width of the bearing. This width includes the perpendicular perimeter material:


^ Bearings					
Type	Spec	Width	Center	From	
Bottom	Spec	3 1/2"	1 3/4"	Left	▼
Bottom	Spec	3 1/2"	1 3/4"	Right	▼
*					

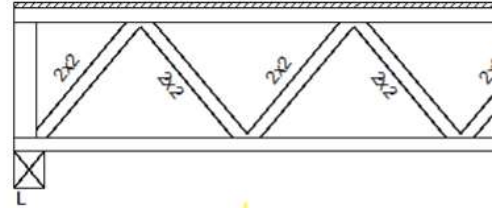

Bottom bearing could be a dropped beam, a bearing wall or a foundation with a sill plate.

You can create a cantilevered joist by moving the centre of the bearing:


Joist Description					
Floor/Roof Composition		Loading	WebHoles	Job Info	
^ Bearings					
Type	Spec	Width	Center	From	
Bottom	Spec	3 1/2"	1 3/4"	Left	▼
Bottom	Spec	3 1/2"	020000	Right	▼
*					

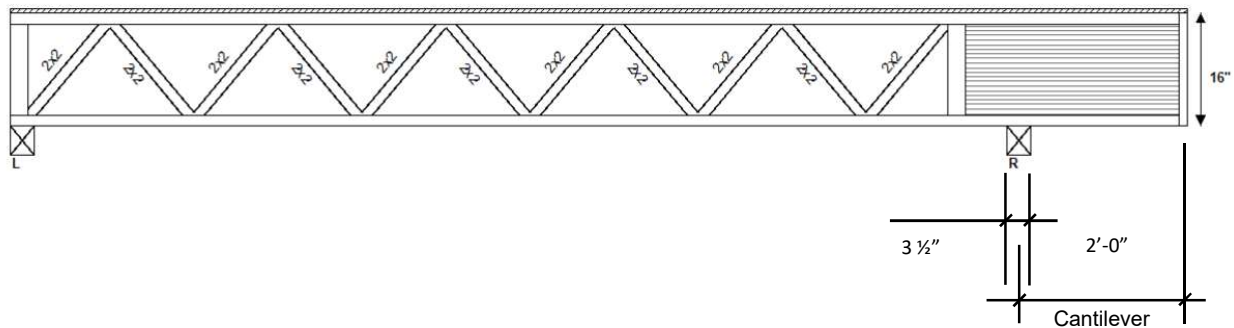

You can also create a third bearing by adding one:




Hint: since it's an open web joist, TRIFORCE® joist will need reinforcement.

^ Bearings					
Type	Spec	Width	Center	From	
Bottom	Spec	3 1/2"	1 3/4"	Left	▼
Bottom	Spec	3 1/2"	7	Left	▼
Bottom	Spec	3 1/2"	1 3/4"	Right	▼

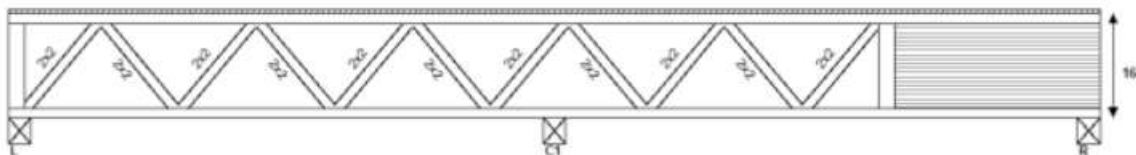

User Guide – Version 3.2

Hangers are also available for bearings. You would need to select hanger details or let it be sorted by your previous setting input as preference (see page 5). The supporting beam will need to be selected.

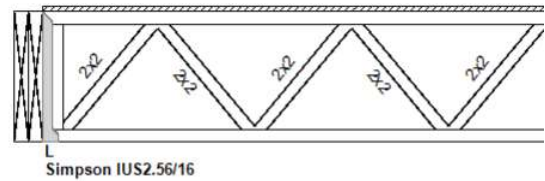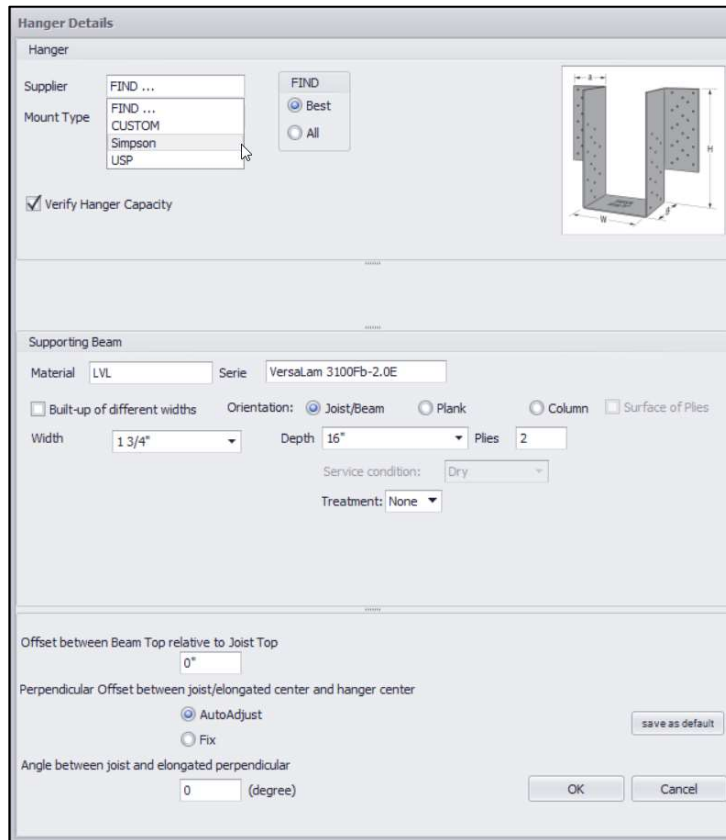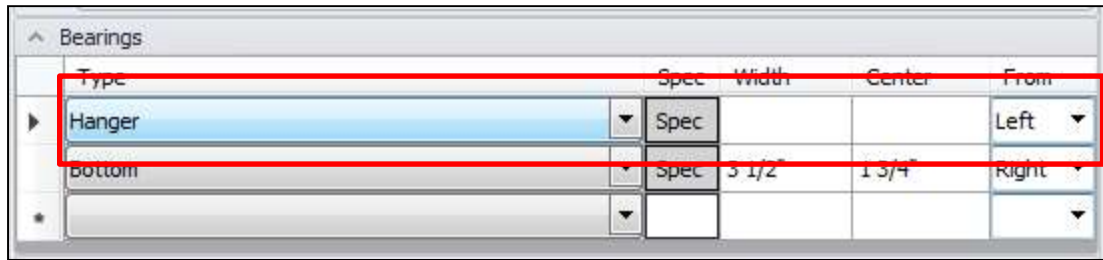

13.6 Treatment:


This section does not use for TRIFORCE® products. Leave “None” as the default option.



User Guide – Version 3.2


13.7 Deflection Limits:

Select or write the deflection needed as per Architect and/or Engineer requirement under live, dead and total. If you are using the ICC codes, you will have access to check “Apply Creep” (see local code for requirements).

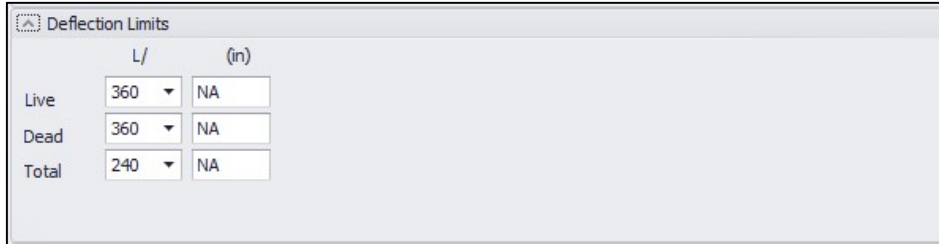

Deflection Limits

	L/	(in)
Live	360	NA
Dead	360	NA
Total	240	NA

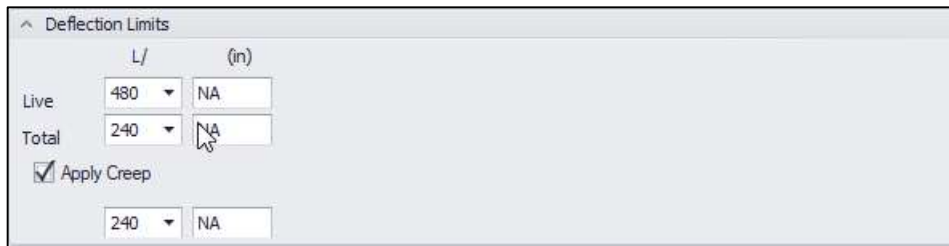

Deflection Limits

	L/	(in)
Live	480	NA
Total	240	NA


Apply Creep

	240	NA
--	-----	----

13.8 Joist/Beam Spacing:

Select or write the spacing needed as per Architect and/or Engineer requirement.

Load sharing is defined at “Auto” by default and use the load sharing factor applicable to the material if authorise by the standard. There is no load sharing factor authorised for TRIFORCE® Joist or others manufactured Joists.

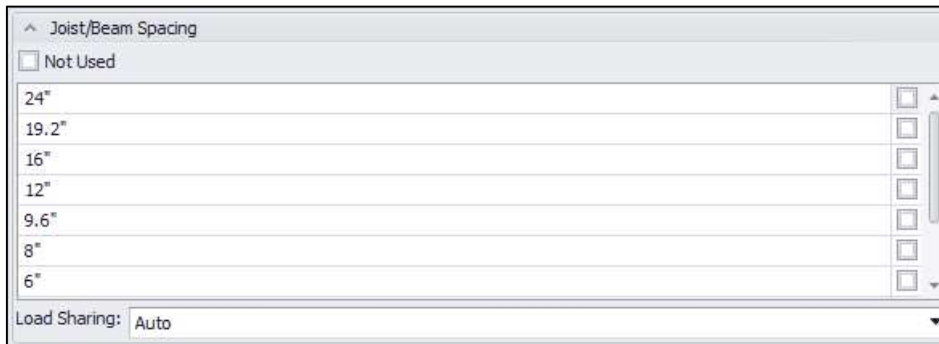


Joist/Beam Spacing

Not Used

24"	<input type="checkbox"/>
19.2"	<input type="checkbox"/>
16"	<input type="checkbox"/>
12"	<input type="checkbox"/>
9.6"	<input type="checkbox"/>
8"	<input type="checkbox"/>
6"	<input type="checkbox"/>

Load Sharing: Auto

When designing a girder, you must check “not used,” so it won’t add tributary loading as per spacing.

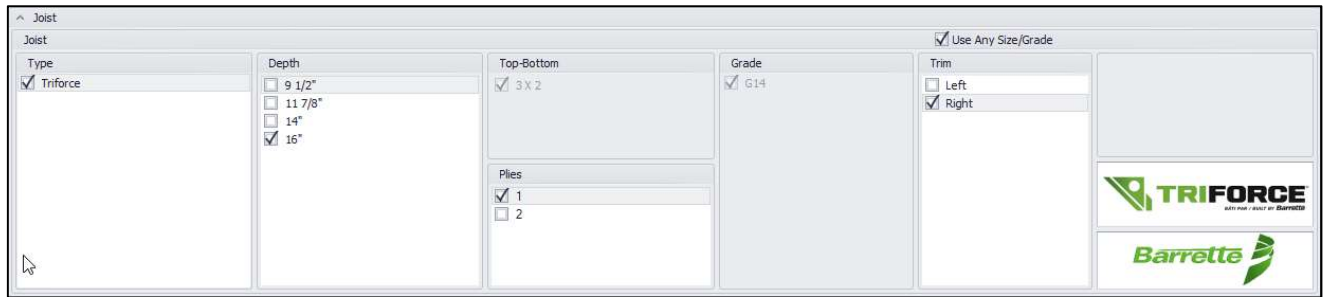

13.9 Type:

TRIFORCE® is the only choice available, except for Open Joist 2000 licensees.



13.10 Depth:

Select depth required

13.11 Top-Bottom:

Available to select other sizes if "Use Any Size/Grade" is unchecked (not recommend)

13.12 Plies:

Select plies required

13.13 Grade:


Available to select other sizes if "Use Any Size/Grade" is unchecked (not recommend)

13.14 Use Any Size/Grade:


To have other sizes and wood grade (not recommend)

13.15 Trim:


Select the side you want the OSB panel (ex. Right)

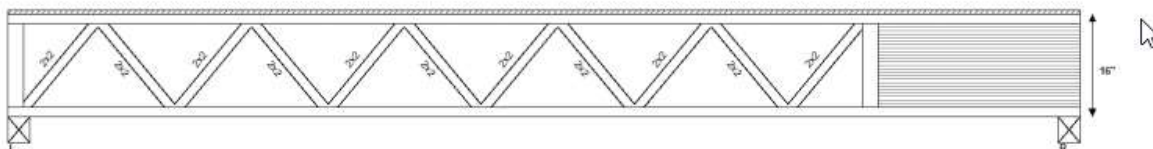


14. Viewer:

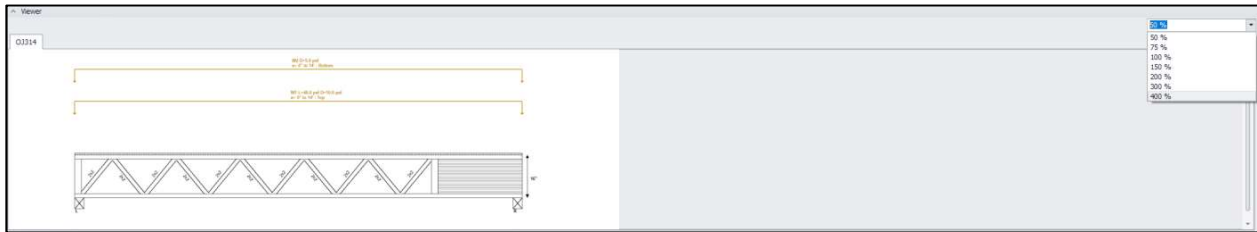


On the left side, you will see all loadings and the length and depth of the joist to be analyzed:

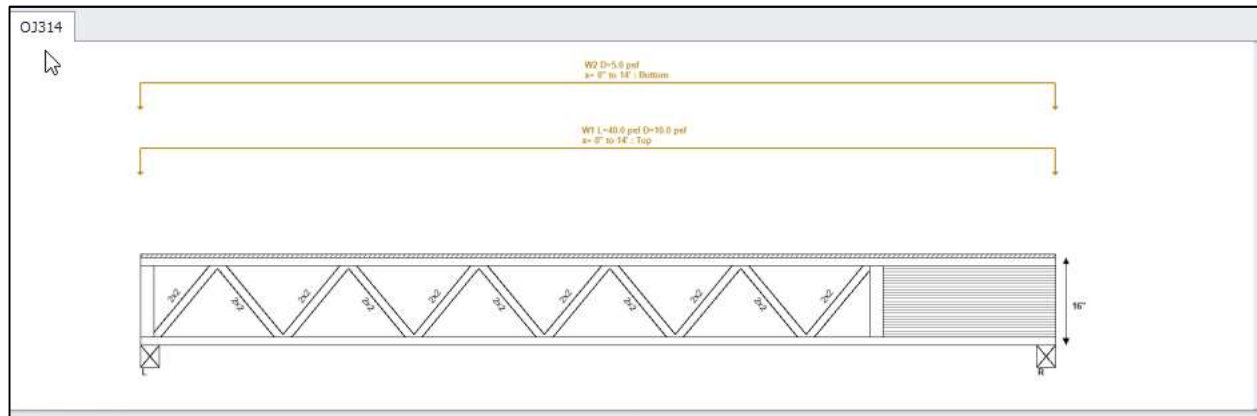

On the right side, you have access to the percentage value you want the joist to appear (50% by default):

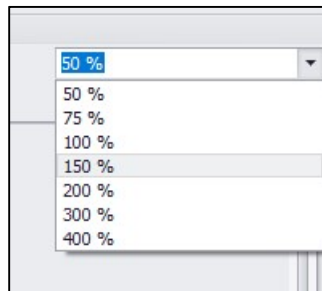

15. Loading:

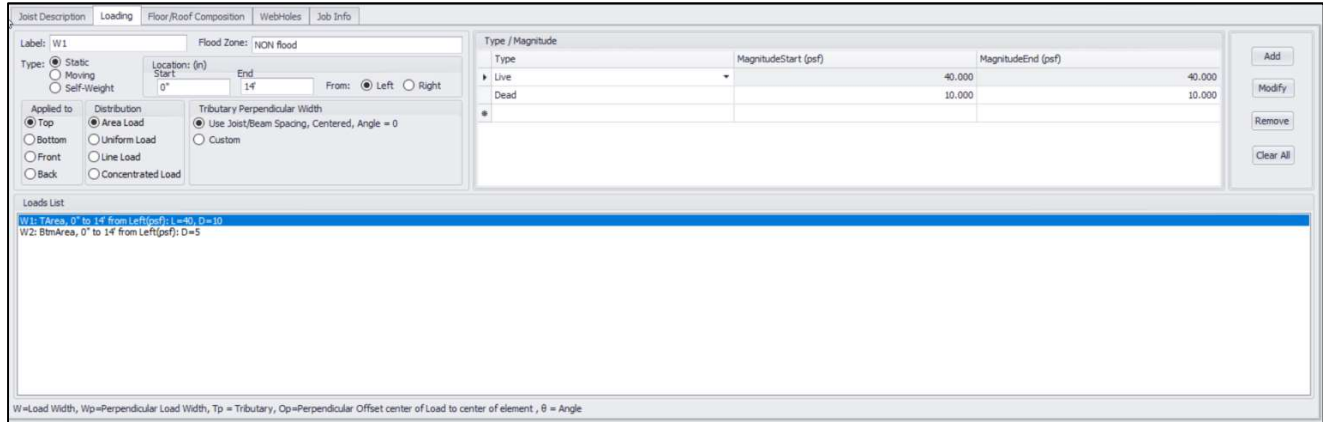

15.1 Label:

Label for load inputs will be displayed in the loads list



15.2 Flood Zone:

Available for USA ICC code only. Applied as per code if required

- 1- NON flood (by default)
- 2- V flood
- 3- COASTAL A flood
- 4- OTHER flood

15.3 Type:

- 1- **Static:** load type as per application (see local code)

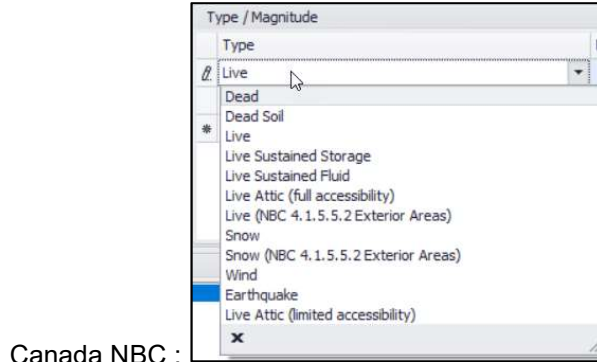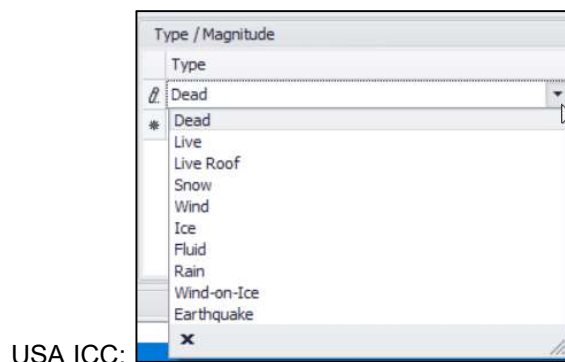

USA ICC:

Canada NBC :

User Guide – Version 3.2

2- **Moving Load:** load type as per application (see local code)

USA ICC:

Joist Description | Loading | Floor/Roof Composition | WebHoles | Job Info

Label: W2 Flood Zone: NON flood

Type: Static
 Moving
 Self-Weight

Location: (in)
 Start: 0' End: 14' From: Left Right

Applied to: Top
 Bottom
 Front
 Back

Distribution: Area Load
 Uniform Load
 Line Load
 Concentrated Load

Type / Magnitude: **Offices, Computer Rooms**
 Offices, Computer Rooms
 Libraries, Schools, Stores
 Roofs

Canada NBC:

Joist Description | Loading | Floor/Roof Composition | WebHoles | Job Info

Label: W1

Type: Static
 Moving
 Self-Weight

Location: (in)
 Start: 0' End: 16' From: Left Right

Applied to: Top
 Bottom
 Front
 Back

Distribution: Area Load
 Uniform Load
 Line Load
 Concentrated Load

Type / Magnitude: **Offices, Industry, Hospital, Stage**
 Offices, Industry, Hospital, Stage
 Class Rooms
 Roofs

3- **Self-Weight:** self-weight adjustment if needed (not recommend to change it)

Label: W1

Type: Static
 Moving
 Self-Weight

Location: (in)
 Start: 0' End: 16' From: Left Right

Type / Magnitude: Automatically included in loads analysis if element self-weight is greater or equal:
 5.5 (plf)

15.4 Applied to:

- 1- Top
- 2- Bottom
- 3- Front
- 4- Back

Label: W1

Type: Static
 Moving
 Self-Weight

Location: (in)
 Start: 0' End: 16' From: Left Right

Applied to: Top
 Bottom
 Front
 Back

Distribution: Area Load
 Uniform Load
 Line Load
 Concentrated Load

Tributary Perpendicular Width
 Use Joist/Beam Spacing, Centered, Angle = 0
 Custom

Hint: all beams attached to the side of a girder needs to be applied front or back even if using top mount hangers. See appendix A for maximum load protection.

User Guide – Version 3.2

16. Distribution:

- 1- Area Load
- 2- Uniform Load
- 3- Line Load
- 4- Concentrated Load

16.1 AREA LOAD (PSF):

Type	MagnitudeStart (psf)	MagnitudeEnd (psf)
Live	40.000	40.000
Dead	10.000	10.000

Type	MagnitudeStart (psf)	MagnitudeEnd (psf)
Live	40.000	40.000
Dead	10.000	10.000

Area load is applied per “psf” (Standard floor loadings)

For area load, you can select “use Joist/Beam spacing, centered, Angle = 0” or “custom.” The first option calculates the area load as per preselected spacing. The second one gives you the option on changing the spacing for a custom tributary perpendicular width like 14” for example.

16.2 UNIFORM LOAD (PLF):

Type	MagnitudeStart (plf)	MagnitudeEnd (plf)
Live	40.000	40.000
Dead	10.000	10.000

Uniform load is applied per “plf” (Wall parallel to joist transferring loads)

User Guide – Version 3.2

16.3 LINE LOAD (PLF):

Line load is applied per “plf” (perpendicular or angle bearing wall transferring loads)


For line load, you can select “use Joist/Beam Width, centered, Angle = 0” or “custom.” The first option calculates the line load to be the same width as per the joist spacing. The second one gives you the option on changing the spacing for a custom tributary perpendicular width, like 14" for example.

16.4 CONCENTRATED LOAD (LBS):

Concentrated load is applied per “Lbs” (top, Bottom, front or back)

For concentrated load, you can select “use Joist/Beam Width, centered, Angle = 0” or “custom” for the top and bottom only. The first option calculates the concentrated load to be the same width as per the joist width. As for custom, you can select the total width of the concentrated load applied to the top or bottom; if it’s not centred select the offset from the centre line and select the angle of that it would be installed if not installed at 90 degrees.

17. Loads list and Viewer:

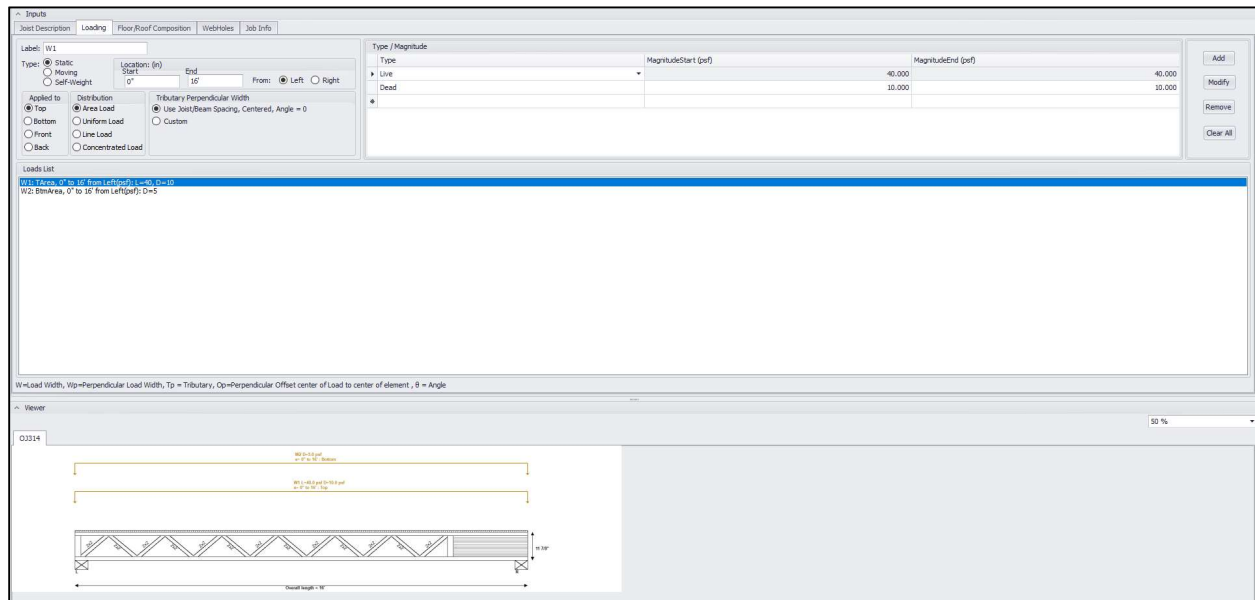


You can see all the loads input in the “loads list” and in the “viewer”.

18. Floor/Roof Composition:

- 1- Sheathing
- 2- Ceiling
- 3- Gypsum Board
- 4- Vibration


18.1 SHEATHING:

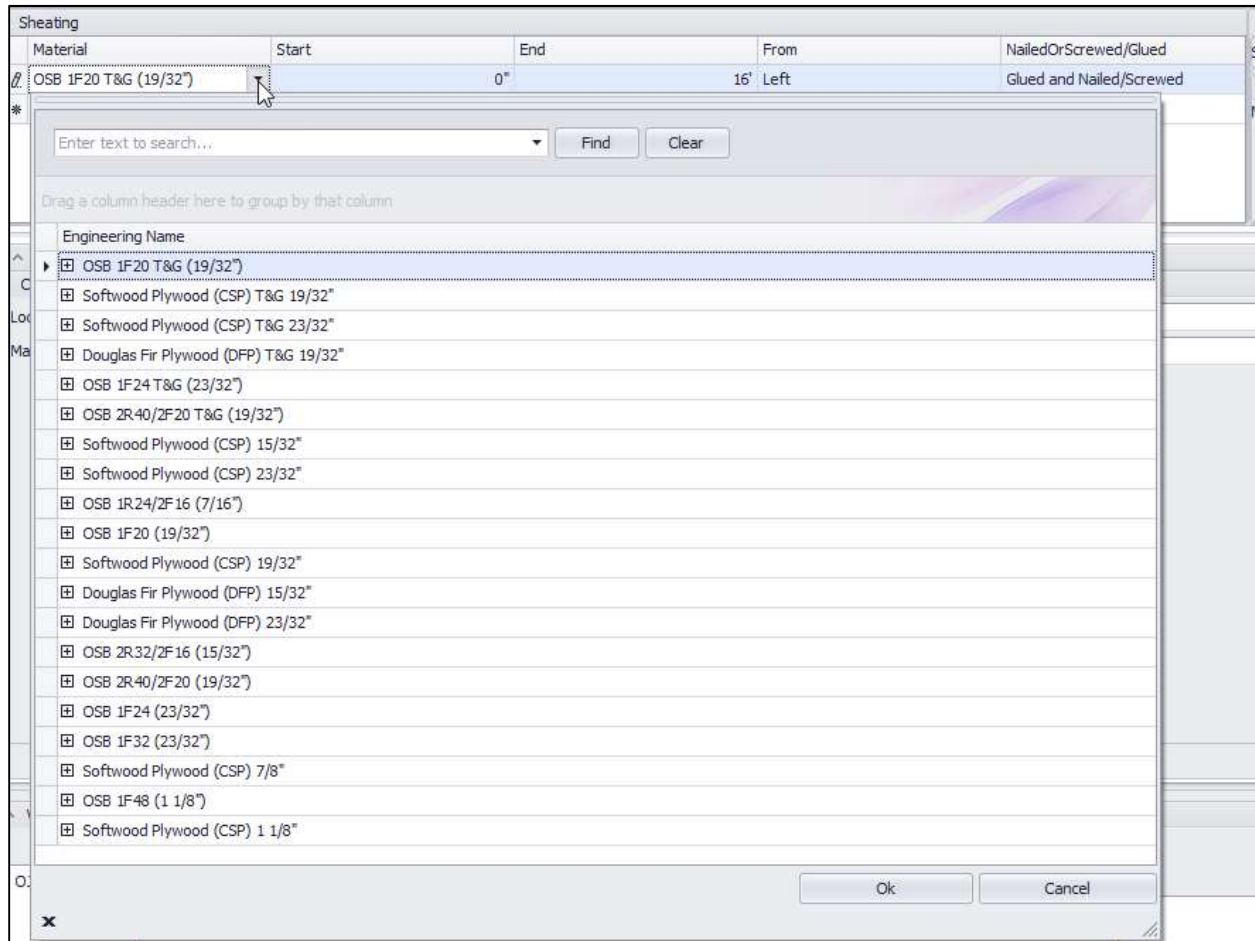

Material: select the one you need (for more material, see Database)


Start/End/From: select from where you want your sheathing to start and to end. Ex.: You could have an attic without having the sheathing all the way because of the rafters crossing the joist at bearing.

Nailed OR Screwed/Glued: you can select rather *glued and nailed/screwed* or *nailed/screwed*:

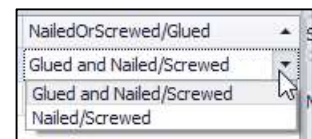


User Guide – Version 3.2


18.2 CEILING

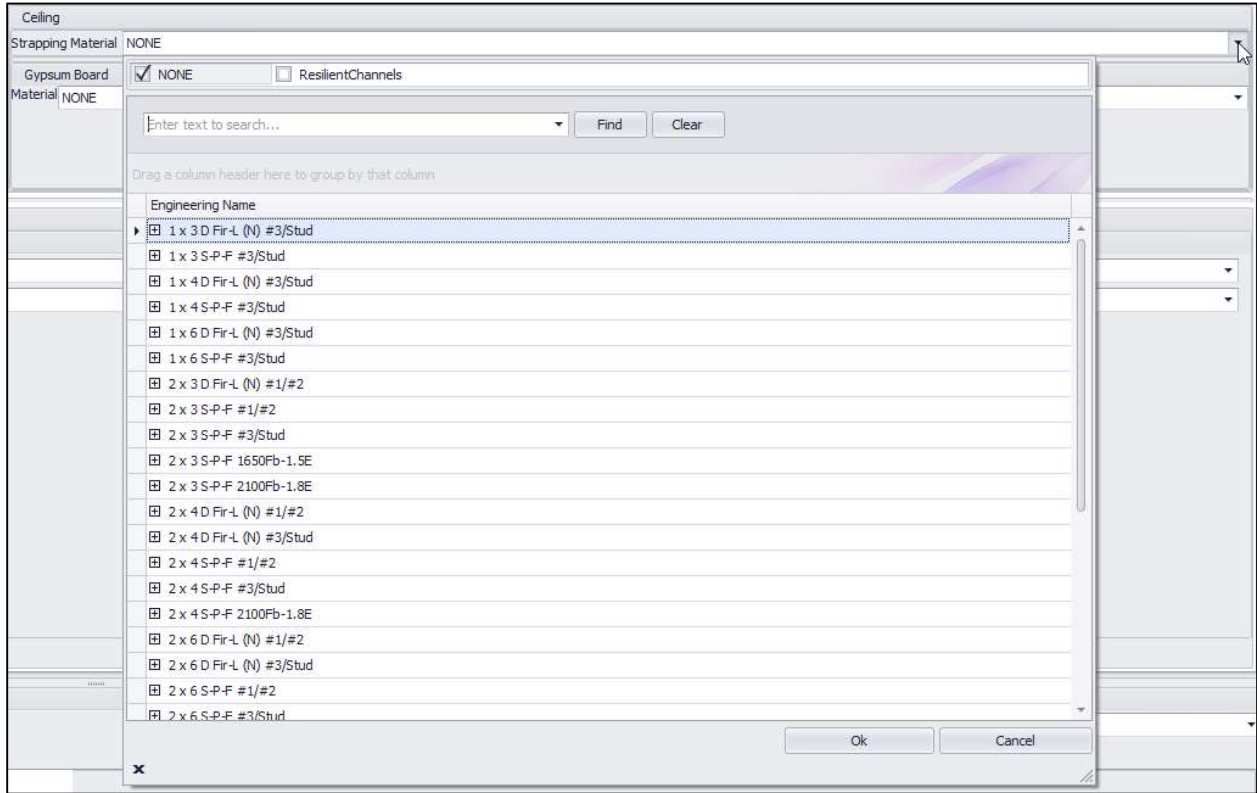

For the ceiling (or bottom chord strapping), select the one you need (for more material, see database). When selected, you will need to specify the on-center spacing for those:

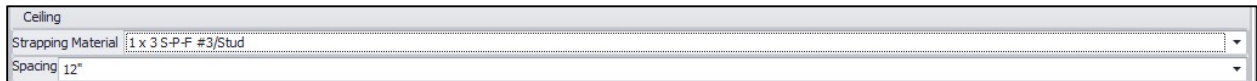

The same if you select Resilient Channels:

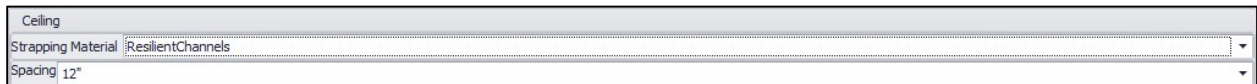


And finally “NONE”:



User Guide – Version 3.2


18.3 GYPSUM BOARD

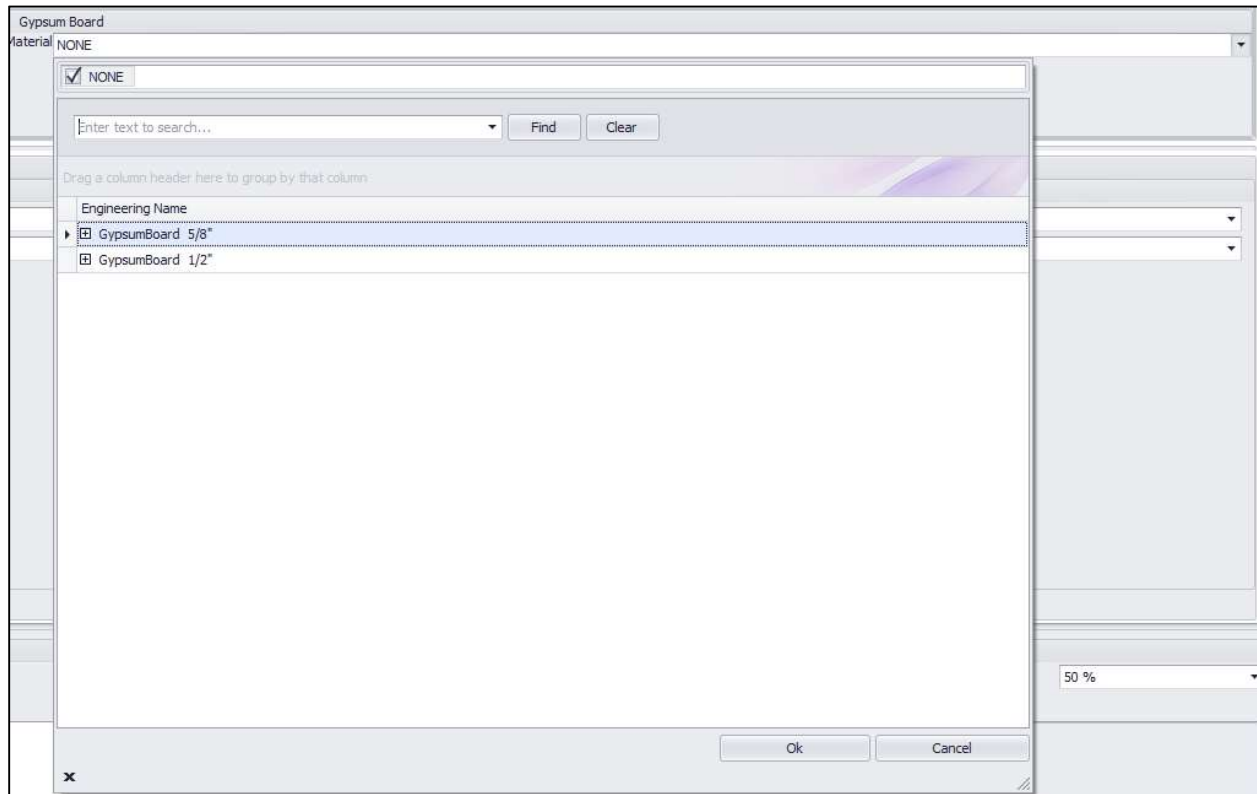

For Gypsum board, you have 3 options:


- Gypsum board 1/2"
- Gypsum board 5/8"
- And NONE

18.4 VIBRATION (FOR CANADIAN CODE)

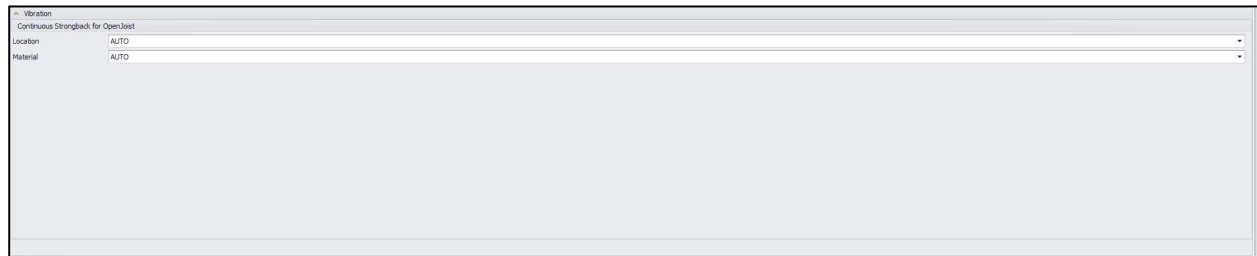

These settings are for strongbacks to be analyzed in the Canadian Vibration Criteria.

User Guide – Version 3.2

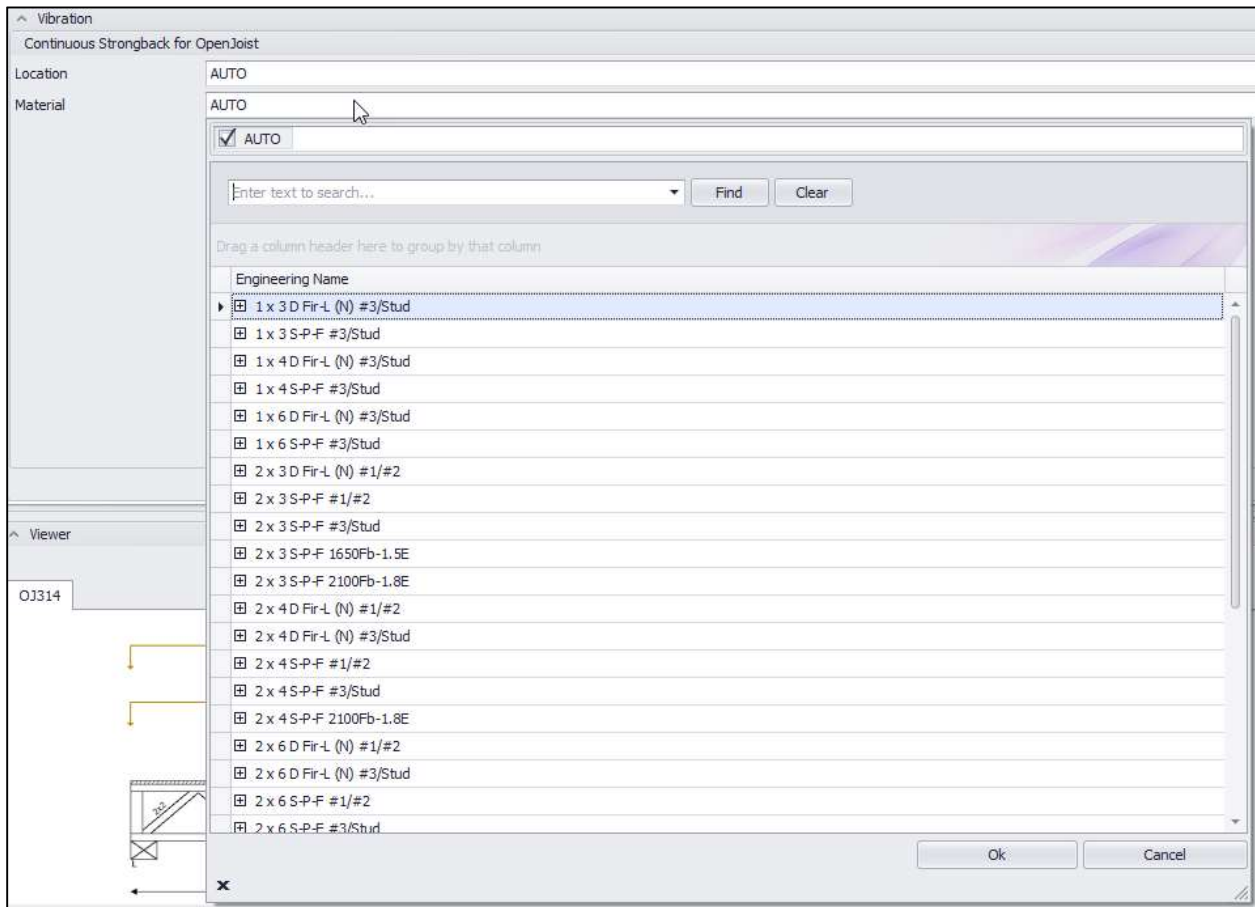


For the location, you have 5 options:

- Auto
- None
- 1
- 2
- Custom

At “Auto,” Analyzer will install minimum requirements needed. For “None,” it will analyze your design without any strongback. For “1” and “2,” it will analyze as per the number selected. If you don’t select any *material*, it will analyze with the minimal material available in the inventory.


User Guide – Version 3.2

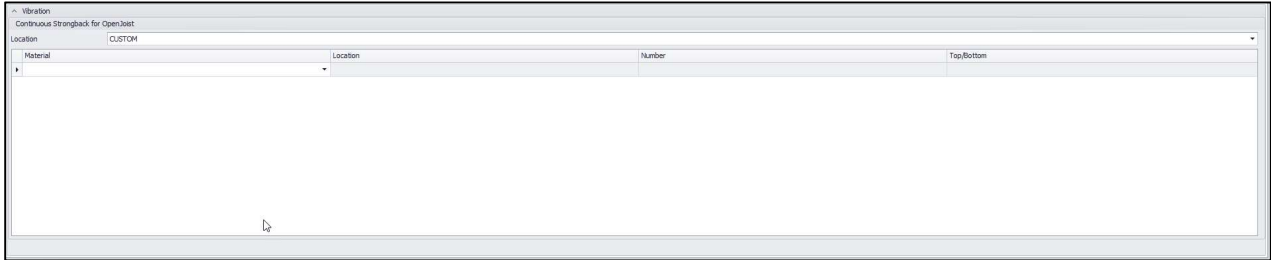

For the “Custom” selection, you will be able to change location, number of strongbacks and if applied to the Top or Bottom of the joist.

Hint: Always try as much as possible to install those strongbacks to the bottom chord for a better result. One 2x6 has better performance than two 2x4.

If you are using the ICC Code, you can select “Perform Canadian vibration check”:

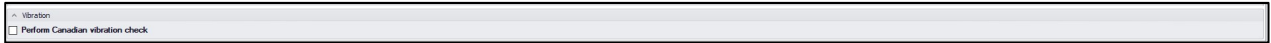


If you do so, you’ll have access to the same settings as the “Canadian Code”:



19. Web Holes:

- 1- Type
- 2- Center
- 3- Vertical center
- 4- Width
- 5- Height

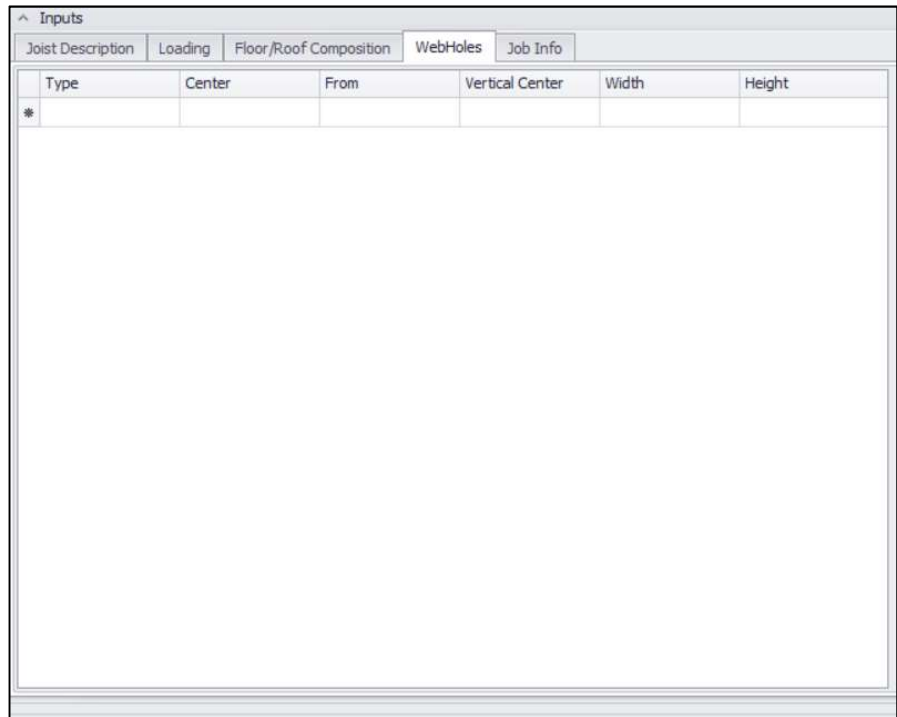

Type	Center	From	Vertical Center	Width	Height
*					

You can analyze the joist with different holes sizes in the OSB part.



Type	Center	From	Vertical Center	Width	Height
⌀					

You have access to both circular and rectangular holes. In each case, you will need to input the:

- Centre of the hole (from the end), and precise from which end;
- Vertical center of the hole and the width (diameter of a circular hole or the horizontal width in the case of a Rectangular hole).

For a rectangular hole, you will need to input the height of the hole (vertical).

User Guide – Version 3.2

19.1 Circular hole:

Inputs


Joist Description	Loading	Floor/Roof Composition	WebHoles	Job Info		
Type	Center	▲ From	Vertical Center	Width	Height	
▶ Circular		1' Right		7"	2"	2"
*						

Viewer

OJ314

W2 D=5.0 paf
x= 0" to 16" : Bottom

W1 L=40.0 paf D=10.0 paf
x= 0" to 16" : Top

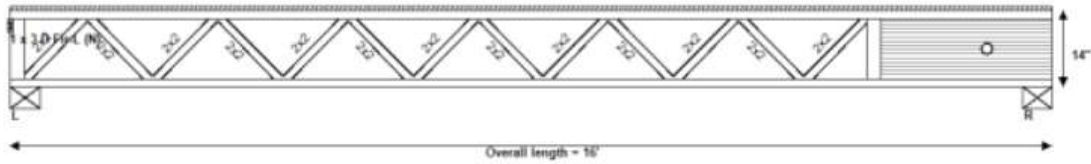

Overall length = 16'

19.2 Rectangular hole:

Inputs


Joist Description	Loading	Floor/Roof Composition	WebHoles	Job Info		
Type	Center	▲ From	Vertical Center	Width	Height	
▶ Rectangular		1' Right		7"	4"	4"
*						

Viewer

OJ314


W2 D=5.0 paf
x= 0" to 16" : Bottom

W1 L=40.0 paf D=10.0 paf
x= 0" to 16" : Top

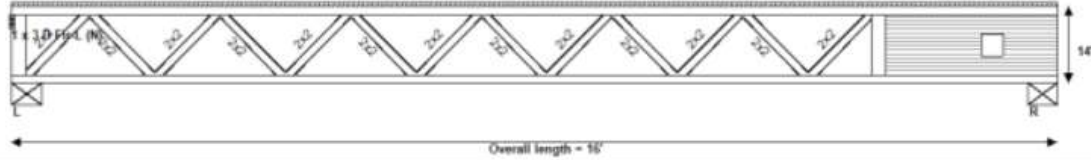

Overall length = 16'

20. Job Info:

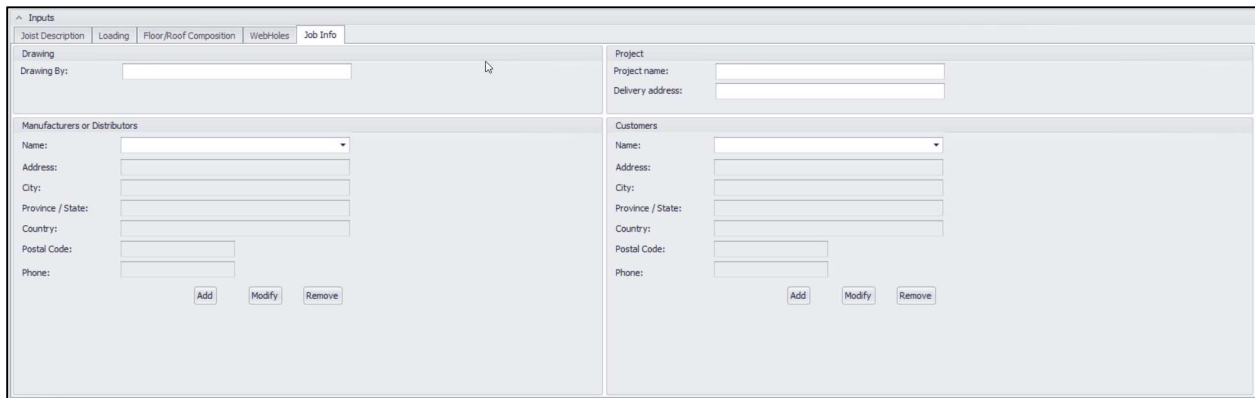


The screenshot shows a software interface with a tabbed menu at the top: Inputs, Joist Description, Loading, Floor/Roof Composition, WebHoles, and Job Info. The Job Info tab is active. The form is divided into several sections: 'Drawing' with a 'Drawing By:' field; 'Project' with 'Project name:' and 'Delivery address:' fields; 'Manufacturers or Distributors' with fields for Name, Address, City, Province / State, Country, Postal Code, and Phone, plus 'Add', 'Modify', and 'Remove' buttons; and 'Customers' with identical fields and buttons.

All input will be transferred to the summary report. If you “add” a “Manufacturer or Distributor” or a “Customers,” it will be added to Analyzer’s database and will be available through the “drop-down menu.”

You will always be able to change the values of a “Manufacturer or Distributor” or a “Customers” by selecting “Modify.”


You will be able to delete any of those contacts from the database by selecting the name, then clicking on “Remove.”

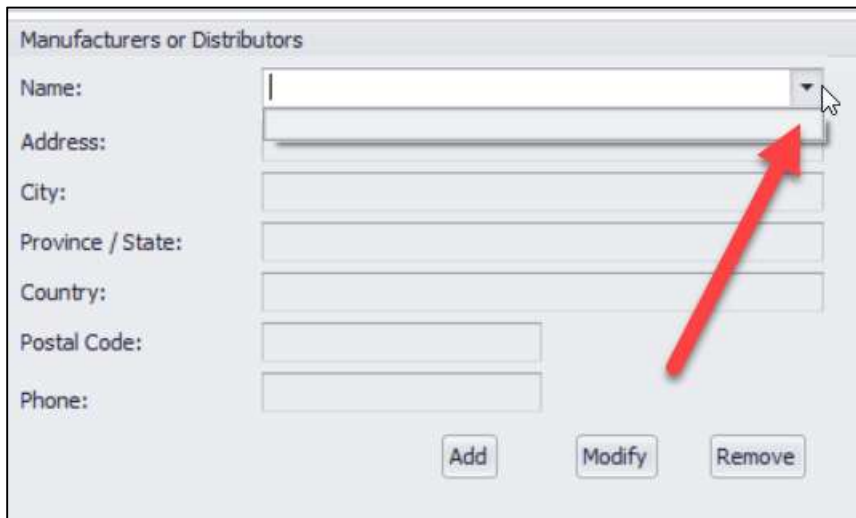

This is a close-up of the 'Manufacturers or Distributors' section of the form. It shows the 'Name:' field with a dropdown arrow on its right side. A red arrow points to this dropdown arrow. Below the 'Name' field are input fields for 'Address:', 'City:', 'Province / State:', 'Country:', 'Postal Code:', and 'Phone:'. At the bottom of this section are three buttons: 'Add', 'Modify', and 'Remove'.

21. Summary Report:

After analyzing the joist (see page 10), you will see this menu on the right.

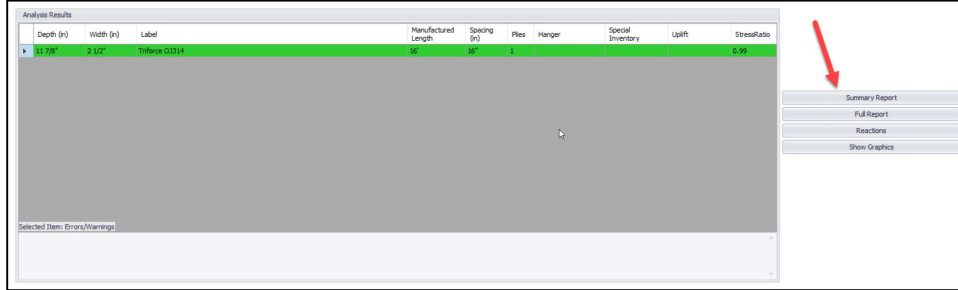

If you select the “Summary Report,” a new window will open. This is the typical design sheet required by engineers, architects and city inspectors. You will have access to export this report in a PDF format. We recommend to send this sheet in PDF for any seal request.

		Manufacturer or Distributor	Reference																																	
Drawing No. Job Number Project Customer Building Address		Drawing No. Job Number Project Customer Building Address	Reference																																	
Manufactured length 10' Total Lft. Right Side 6'	Perman. Material Left Side, Right Side	Chemical/Min. Depth, Top/Bottom Flg. Spacing Intern. Spacing (Pitch) - 16" @ 1.00', 3.0 x 1.16", 16" @ 1.00'																																		
<table border="1"> <thead> <tr> <th>Top</th> <th>Roof(Φ)=0'</th> <th>Pitch(Φ)=0'</th> </tr> </thead> <tbody> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S1]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S2]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S3]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S4]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S5]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S6]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S7]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S8]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S9]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S10]</td> </tr> </tbody> </table>				Top	Roof(Φ)=0'	Pitch(Φ)=0'	[No.]	[Type]	[S1]	[No.]	[Type]	[S2]	[No.]	[Type]	[S3]	[No.]	[Type]	[S4]	[No.]	[Type]	[S5]	[No.]	[Type]	[S6]	[No.]	[Type]	[S7]	[No.]	[Type]	[S8]	[No.]	[Type]	[S9]	[No.]	[Type]	[S10]
Top	Roof(Φ)=0'	Pitch(Φ)=0'																																		
[No.]	[Type]	[S1]																																		
[No.]	[Type]	[S2]																																		
[No.]	[Type]	[S3]																																		
[No.]	[Type]	[S4]																																		
[No.]	[Type]	[S5]																																		
[No.]	[Type]	[S6]																																		
[No.]	[Type]	[S7]																																		
[No.]	[Type]	[S8]																																		
[No.]	[Type]	[S9]																																		
[No.]	[Type]	[S10]																																		
<table border="1"> <thead> <tr> <th>Bottom</th> <th>Roof(Φ)=0'</th> <th>Pitch(Φ)=0'</th> </tr> </thead> <tbody> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S1]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S2]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S3]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S4]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S5]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S6]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S7]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S8]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S9]</td> </tr> <tr> <td>[No.]</td> <td>[Type]</td> <td>[S10]</td> </tr> </tbody> </table>				Bottom	Roof(Φ)=0'	Pitch(Φ)=0'	[No.]	[Type]	[S1]	[No.]	[Type]	[S2]	[No.]	[Type]	[S3]	[No.]	[Type]	[S4]	[No.]	[Type]	[S5]	[No.]	[Type]	[S6]	[No.]	[Type]	[S7]	[No.]	[Type]	[S8]	[No.]	[Type]	[S9]	[No.]	[Type]	[S10]
Bottom	Roof(Φ)=0'	Pitch(Φ)=0'																																		
[No.]	[Type]	[S1]																																		
[No.]	[Type]	[S2]																																		
[No.]	[Type]	[S3]																																		
[No.]	[Type]	[S4]																																		
[No.]	[Type]	[S5]																																		
[No.]	[Type]	[S6]																																		
[No.]	[Type]	[S7]																																		
[No.]	[Type]	[S8]																																		
[No.]	[Type]	[S9]																																		
[No.]	[Type]	[S10]																																		
<p>L1: 1.40' L2: 1.200+1.5LL LEGEND: L: Live, D: Dead, I: Importance Category Factor Building Importance Category: Normal, Building Perf. (R) = 0.90, L₁ = 1.00, L₂ = 1.00, L₃ = 1.00, L₄ = 1.00, L₅ = 1.00</p>																																				
<table border="1"> <thead> <tr> <th colspan="4">UNFACTORED REACTIONS</th> </tr> <tr> <th>Bearing</th> <th>Min</th> <th>Max</th> <th></th> </tr> </thead> <tbody> <tr> <td>Partial</td> <td>0</td> <td>1</td> <td></td> </tr> <tr> <td>D: Live</td> <td>160</td> <td>160</td> <td></td> </tr> <tr> <td>Dead</td> <td>160</td> <td>160</td> <td></td> </tr> <tr> <td>Live</td> <td>0</td> <td>427</td> <td></td> </tr> </tbody> </table>				UNFACTORED REACTIONS				Bearing	Min	Max		Partial	0	1		D: Live	160	160		Dead	160	160		Live	0	427										
UNFACTORED REACTIONS																																				
Bearing	Min	Max																																		
Partial	0	1																																		
D: Live	160	160																																		
Dead	160	160																																		
Live	0	427																																		
<p>Date: 2018-10-22 STRUCTURAL ANALYZER Version: 1.7.2018 IMPERIAL Canada Page: 1 of 2</p>																																				

BEARING ANALYSIS												
Label	Real Bearing		Min Calc. Bearing		Normal				Uplift			
	Center, Width (in)	Perp. Width (in)	K _s	R _f	R _e K _o (lb)	R _f / (R _e K _o)	Critical LC-Part	R _f	K _o	Critical LC-Part		
L	2.75", 5.5", 9999999"	1.00	NA, NA	NA	840	3286	1.00	0.26	NA	NA		
R	189.25", 5.5", 9999999"	1.00	NA, NA	NA	840	2057	1.00	0.41	NA	NA		
SHEAR ANALYSIS												
Axis	Max At (in)	V _r (lb)	V _s K _o (lb)	V _r / (V _s K _o)	Critical LC-Part							
Z	189.25"	816	2057	1.00	0.40		2-1					
BENDING ANALYSIS												
Axis	At (in)	M _r (lb-ft)	K _L	M _e K _o (lb-ft)	M _r / (M _e K _o)	Critical LC-Part						
Z	95.75"	3170	1.00	4648	1.00	0.68		2-1				
DEFLECTION												
Axis	Critical			Calculated			Criteria		Calc.			
	LOAD CASE		Part	Δ (in)	Camber Δ (in)	Δ - Camb (in)	Δ (in)	Δ (in)	L/360	L/360	0.49	
Z	Δ _L	Span L-R	LCL1 : L	1	0.254"	NA	NA	L/735	0.518"	L/360	0.49	
Z	Δ _D	Span L-R	LCD1 : D	0	0.095"	NA	NA	L/1960	0.518"	L/360	0.18	
Z	Δ _T	Span L-R	LCT1 : D+L	1	0.349"	NA	NA	L/534	0.777"	L/240	0.45	
Z	Δ _{sare Joist}	Span L-R	LCL1 : L	1	0.288"	NA	NA	L/648	0.518"	L/360	0.56	
FLOOR'S PERFORMANCE												
Subfloor: OSB 1F20 T&G (19/32") Glued and Nailed/Screwed, Continuous Strongback: None.												
Strapping: None, Gypsum Board NONE. Span L-R = 15' 0", L _v = 15' 7".												
								Vibration controlled span Ratio :	Span L-R / L _v	1.00		
								Floor's Performance Ratio :	Δ _{Span L-R} / Δ _{L_v}	0.99		
Date: 2018-10-22 STRUCTURAL ANALYZER Version: 1.7.2018 IMPERIAL Canada Page: 2 of 2												

Analyzed values in the grey zones need to be 1.00 or less (required minimum performance). In other words, the closer the score is to 0, the better the performance.

BEARING ANALYSIS												
Label	Real Bearing		Min Calc. Bearing		Normal				Uplift			
	Center, Width (in)	Perp. Width (in)	K _s	R _f	R _e K _o (lb)	R _f / (R _e K _o)	Critical LC-Part	R _f	K _o	Critical LC-Part		
L	2.75", 5.5", 9999999"	1.00	NA, NA	NA	840	3286	1.00	0.26	NA	NA		
R	189.25", 5.5", 9999999"	1.00	NA, NA	NA	840	2057	1.00	0.41	NA	NA		
SHEAR ANALYSIS												
Axis	Max At (in)	V _r (lb)	V _s K _o (lb)	V _r / (V _s K _o)	Critical LC-Part							
Z	189.25"	816	2057	1.00	0.40		2-1					
BENDING ANALYSIS												
Axis	At (in)	M _r (lb-ft)	K _L	M _e K _o (lb-ft)	M _r / (M _e K _o)	Critical LC-Part						
Z	95.75"	3170	1.00	4648	1.00	0.68		2-1				
DEFLECTION												
Axis	Critical			Calculated			Criteria		Calc.			
	LOAD CASE		Part	Δ (in)	Camber Δ (in)	Δ - Camb (in)	Δ (in)	Δ (in)	L/360	L/360	0.49	
Z	Δ _L	Span L-R	LCL1 : L	1	0.254"	NA	NA	L/735	0.518"	L/360	0.49	
Z	Δ _D	Span L-R	LCD1 : D	0	0.095"	NA	NA	L/1960	0.518"	L/360	0.18	
Z	Δ _T	Span L-R	LCT1 : D+L	1	0.349"	NA	NA	L/534	0.777"	L/240	0.45	
Z	Δ _{sare Joist}	Span L-R	LCL1 : L	1	0.288"	NA	NA	L/648	0.518"	L/360	0.56	
FLOOR'S PERFORMANCE												
Subfloor: OSB 1F20 T&G (19/32") Glued and Nailed/Screwed, Continuous Strongback: None.												
Strapping: None, Gypsum Board NONE. Span L-R = 15' 0", L _v = 15' 7".												
								Vibration controlled span Ratio :	Span L-R / L _v	1.00		
								Floor's Performance Ratio :	Δ _{Span L-R} / Δ _{L_v}	0.99		

User Guide – Version 3.2

22. Full Report:

If you select the “Full Report,” a new window will open. This is the Full analysis report. Could be used by engineers to look deeper into the analysis.

Report Triforce OJ314

FULL ANALYSIS REPORT
Date: October 23, 2018

STRUCTURAL ANALYSIS
Version : 1.7.3328

Design method: Limit State Design LSD
Applicable area/country: CANADA
Applicable Code for Design: National Building Code of Canada NBC 2015, CSA O86-14
Evaluation report number: CCMC 19474-R

JOIST DESCRIPTION, BEARING CONDITION AND LOADING

Triforce
OJ314

Plies: 1
Depth: 11 7/8"

Manufactured length: 16'
Trim: left 0", right 0"

Treatment:

Use: Floor
Out-to-out span: 16'
Cantilever: left 0", right 0"
Perimeter material: left None, right None

Bearings:
Left width 1/2"
 pspp_width=99999" eccentricity=0"
Normal along depth.
Right width 1/2"
 pspp_width=99999" eccentricity=0"
Normal along depth.
Calculation span: 15' 6 1/2"
Center to center span: 15' 6 1/2"
Reaction: 160

Report Triforce OJ314

R Joist 840.00 0.00 0.00 0.00 1.00 840.00 2067.00 1.00

Note: RElement = RTotals - Min(RzStuds*EdEnd + RrRim*EdEnd, PFOntBearing)

CAPACITIES and MODIFICATION FACTORS

K = 3703000lb E = 1400000psi EI = 288E6lb*in⁴ EIcomp = 310E6lb*in⁴
Kzb = 1 Kzv = 1 Kzcp = 1 Kze = 1
Kxb = 1 Kxv = 1 Kxcp = 1 Kxe = 1

SHEAR AND BENDING ANALYSIS
Note: Analysis is starting at x equal to the center of the contact area between the left bearing and the joist

Partial #0	LC 1	X	Vz	kD	Kzv	Vr	Vz/(Vr*Xd)	Mz	kD	Mr	Mz/(Mr*Xd)
0.00	218	0.65	1.00	2810	0.13	0	0.65	4648	0.00	0	0.00
1.00	218	0.65	1.00	2448	0.14	18	0.65	4648	0.01	18	0.01
2.00	218	0.65	1.00	2386	0.14	36	0.65	4648	0.01	36	0.01
3.00	211	0.65	1.00	2325	0.14	54	0.65	4648	0.02	54	0.02
4.00	208	0.65	1.00	2263	0.14	71	0.65	4648	0.02	71	0.02
5.00	206	0.65	1.00	2202	0.14	88	0.65	4648	0.03	88	0.03
6.00	204	0.65	1.00	2140	0.15	105	0.65	4648	0.03	105	0.03
7.00	201	0.65	1.00	2078	0.15	122	0.65	4648	0.04	122	0.04
8.00	199	0.65	1.00	2017	0.15	139	0.65	4648	0.05	139	0.05
9.00	197	0.65	1.00	1955	0.15	156	0.65	4648	0.05	156	0.05
10.00	194	0.65	1.00	1894	0.16	172	0.65	4648	0.06	172	0.06
11.00	192	0.65	1.00	1832	0.16	189	0.65	4648	0.06	189	0.06
12.00	190	0.65	1.00	1805	0.16	204	0.65	4648	0.07	204	0.07
13.00	187	0.65	1.00	1805	0.16	219	0.65	4648	0.07	219	0.07
14.00	185	0.65	1.00	1805	0.16	235	0.65	4648	0.08	235	0.08
15.00	183	0.65	1.00	1805	0.16	250	0.65	4648	0.08	250	0.08
16.00	180	0.65	1.00	1805	0.15	265	0.65	4648	0.09	265	0.09
17.00	178	0.65	1.00	1805	0.15	280	0.65	4648	0.09	280	0.09
18.00	176	0.65	1.00	1805	0.15	295	0.65	4648	0.10	295	0.10
19.00	173	0.65	1.00	1805	0.15	309	0.65	4648	0.10	309	0.10
20.00	171	0.65	1.00	1805	0.15	324	0.65	4648	0.11	324	0.11
21.00	168	0.65	1.00	1805	0.14	338	0.65	4648	0.11	338	0.11

23. Reactions:

If you select “Reactions,” a new window will open. This window allows you to see the reactions of the joist analyzed at each bearing.

Reactions Triforce OJ314

Unfactored MAXIMUM Reactions (lb)


Bearing	IsUplift	Dead	Live	Governed By Partial
L	<input type="checkbox"/>	160	426.67	1
R	<input type="checkbox"/>	160	426.67	1

Unfactored MINIMUM Reactions (lb)


Bearing	IsUplift	Dead	Live	Governed By Partial
L	<input type="checkbox"/>	160	0	0
R	<input type="checkbox"/>	160	0	0

24. Show Graphics:

If you select “Show Graphics,” a new window will open. This is the Full analysis graphics. Could be used by engineers to look deeper into the analysis.

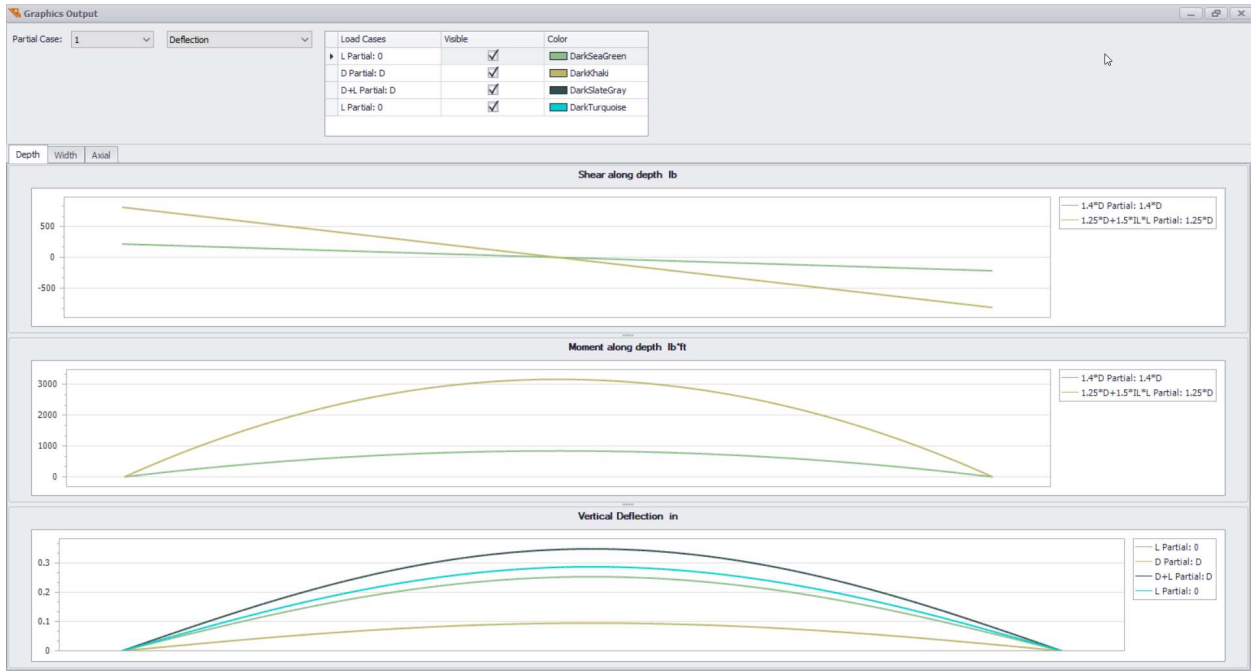

By moving the mouse over the graph, you will see the analysis as per where you are situated over the joist.

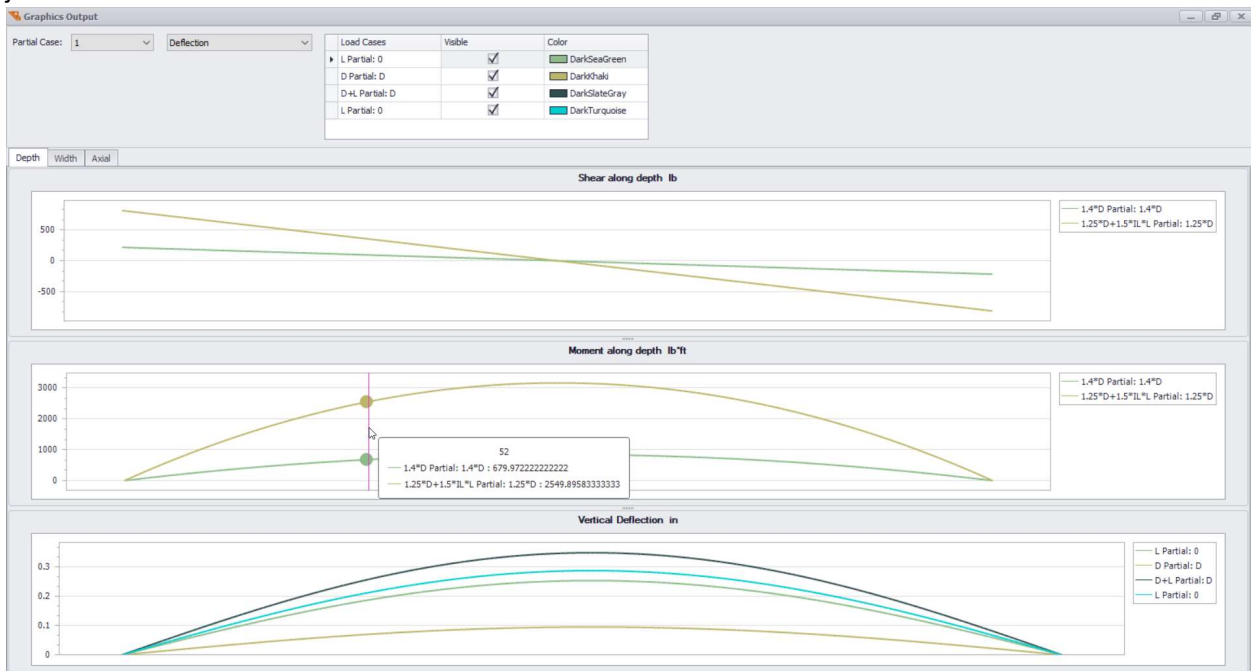

25. Appendix:

TRIFORCE® open joist is produced in several depths and lengths to fulfill floor framing needs. Lengths are offered in two foot increments due to their 24" trimmability.

Depth	Series	Weight (lbs/ft)	Stock Lengths (feet)
11 7/8 in	OJ314	2.8	8, 10, 12, 14, 16
	OJ315	2.8	18
	OJ415	3.35	20
	OJ418	3.35	18(S)*, 20(S)*, 22

Depth	Series	Weight (lbs/ft)	Stock Lengths (feet)
14 in	OJ314	2.85	8, 10, 12, 14, 16
	OJ315	2.85	18, 20
	OJ415	3.45	22
	OJ418	3.45	20(S)*, 24, 26

Depth	Series	Weight (lbs/ft)	Stock Lengths (feet)
16 in	OJ314	2.95	8, 10, 12, 14, 16
	OJ315	2.95	18, 20
	OJ418	3.55	20(S)*, 22, 24, 26
	OJ420	3.55	28, 30

(S)* = Limited Inventory. Please contact your TRIFORCE representative to determine quantities.

User Guide – Version 3.2

Hints:

- Any point load under 160 lb total won't require any reinforcement.
- Maximum concentrated load applicable to the bottom chord is 160 lb.
- Joist will fail if any negative loads are applied to the top chord with over 40 psf of dead load and 20 psf of live load.
- Joist will fail if any positive loads are applied to the bottom chord with over 40 psf of dead load and 20 psf of live load.

IMPORTANT NOTICE

In keeping with our ongoing commitment to product development, Barrette Structural Distribution periodically updates its TRIFORCE® Analyzer software. To help our engineering team and to assure prompt service, please continue to check our installation page for available updates to your TRIFORCE® Analyzer software and note that we will be supporting the newest version only.

Your organization may have security measures in place that require administrative rights to install / update software on your computer. Contact your IT department if you are seeing access or security-related error messages during installation / updating.

If you have any questions concerning our TRIFORCE® Analyzer, please do not hesitate to contact us at:

Email:

- USA : triforce-support-usa@ebarrette.com
- CAN : triforce-support-can@ebarrette.com

Toll Free: 1-800-263-7265