


Install connectors on the top and bottom chord to transfer from the first ply to the second ply, the load indicated in manufacturer's «Analyzer» software report.

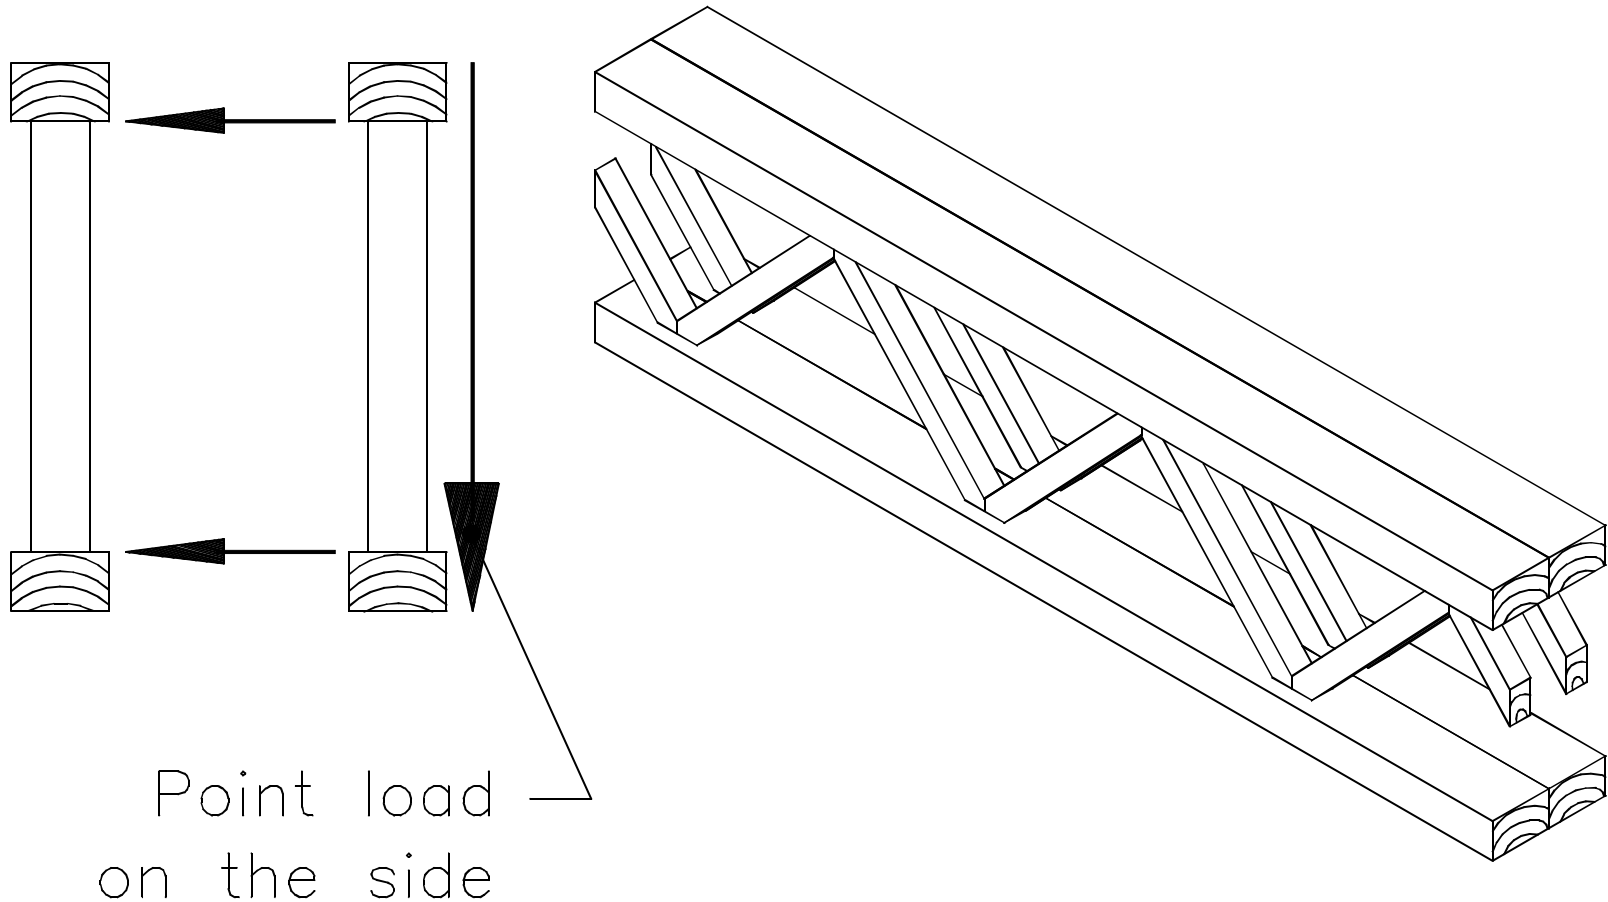

DOUBLED JOIST LOAD TRANSFER

DETAIL DJ