



OPTION 1(Good)

Attached to diagonal web and chord

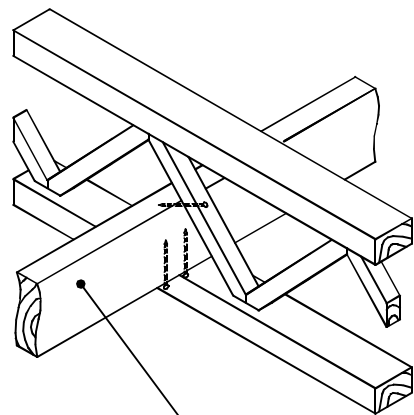


OPTION 2(Better)

Attached to block

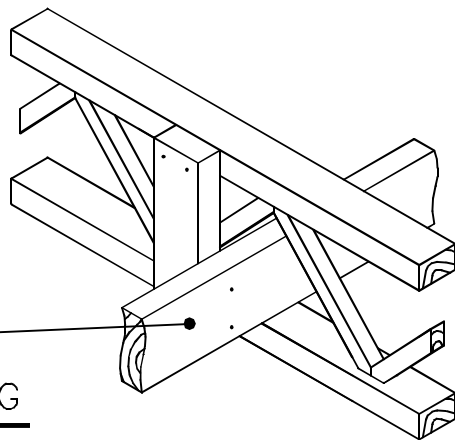

Joint cover: 32" of length, same thickness and depth as strongbacks, centered on splice.

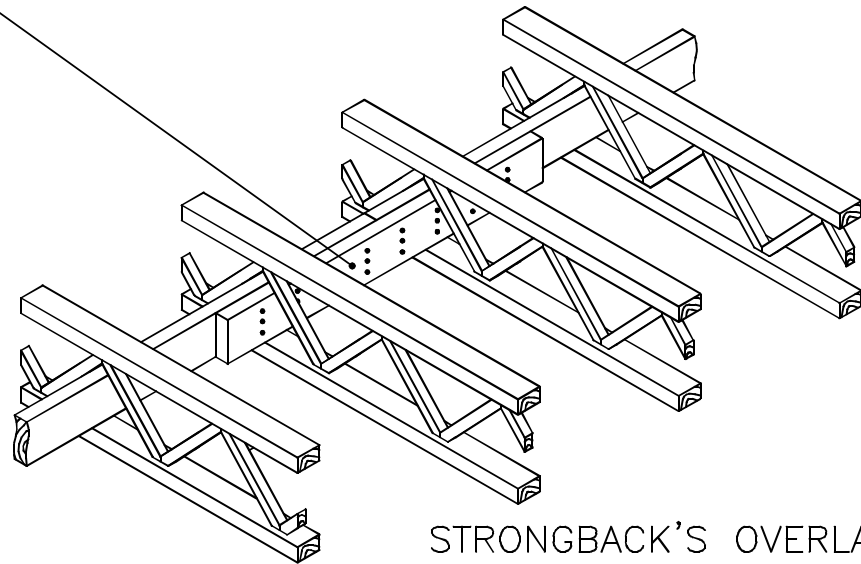

STRONGBACK BRIDGING

STRONGBACK'S OVERLAP

Use gun nails 0.122" x 3.25" or 3" screws to secure strongback(s) at mid span of joist. If two strongbacks are specified, install the second one adjacent to the next closest diagonal web bay.

****Use dry lumber for strongback****