


Maximum permitted opening if there is no concentrated top load

Subfloor

Floor joist

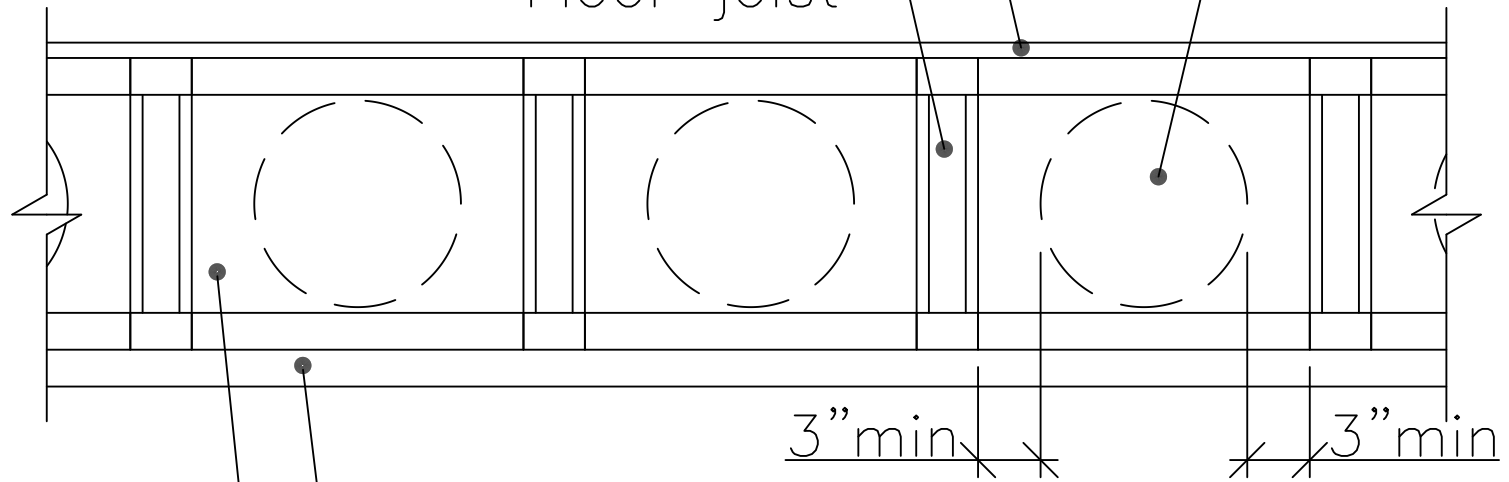

Bearing for floor joists

Typical blocking with same depth as joists and connecting them where required by the project designer.

TYPICAL BLOCKING DETAIL